

Service Manual

ViewSonic PJD6211

Model No. VS12618

DLP Projector

(PJD6211_SM Rev. 1b Nov. 2009)

Copyright

Copyright© 2009 by ViewSonic Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of ViewSonic Corporation.

Disclaimer

ViewSonic makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranty of merchantability or fitness for any particular purpose. Further, ViewSonic reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of ViewSonic to notify any person of such revision or changes.

Trademarks

Optquest is a registered trademark of ViewSonic Corporation.

ViewSonic is a registered trademark of ViewSonic Corporation.

All other trademarks used within this document are the property of their respective owners.

Revision History

Revision	SM Editing Date	ECR Number	Description of Changes	Editor
1a	07/15/09		Initial Release (NO BOM by PE approval)	Sophia Kao
1b	11/04/09		Update Lamp hours reset procedure / RSPL	Sophia Kao

TABLE OF CONTENTS

1	System Introduction	1
1.1	Technical Specification	1
1.2	Location of features, Controls, and I/O	2
1.3	PJD6211 Lamp Specification	7
1.4	PJD6211 System Block Diagram	10
2	Firmware Upgraded Flow	11
2.1	Setup Tool/Equipment	12
2.2	Upgrading Procedure	12
3	Machine Disassembly and Replacement	16
3.1	Tools	16
3.2	Disassembly Procedure	17
3.3	Assembly FAN Module	24
3.4	Disassembly Lamp Module	25
4	Troubleshooting and Verifying the Repair	26
4.1	Troubleshooting	26
4.2	Verifying the Repair	34
5	Connector Information	40
5.1	Main Board	40
5.2	The backside of Main Board	40
5.3	Ballast Board	41
5.4	Power Board	42
6	FRU (Field Replaceable Unit) List	43
6.1	Mechanical Drawing	44
6.2	Packing drawing	46
7	Maintenance	49
	Appendix A: RS-232 Command and Configuration	50
	Appendix B: IR Control Code	52
	Appendix C: How to reset the Lamp Hours	53
8	Recommend Spare Parts List	54

1. System Introduction


1.1 Technical Specification

Display system	Single 0.55" DLP panel
Resolution	XGA (1024 × 768)
Zoom	1.1X
F/No.	2.51 - 2.69
Focal length	21.95 - 24.18mm
Screen size	30" – 300"
Lamp	180W
Input terminal	D-Sub 15-pin x 2, S-VIDEO x 1, VIDEO x 1, Audio signal input (3.5 mm stereo mini jack) x 1
Output terminal	D-Sub 15 pin x 1, Audio signal output (3.5 mm stereo mini jack) x 1, 12-Vdc trigger output x 1
Control terminal	RS-232 x 1, USB x 1
Speaker	2 watt x 1
Video compatibility	NTSC, NTSC 4.43 PAL, PAL-N, PAL M SECAM, HDTV (480p, 576p, 720p, 1080i/p), Composite video
Scanning frequency	31 - 80 KHz 50 - 120 Hz
Horizontal frequency	
Vertical frequency	
Environment	Operating: Temperature: 0°C to 40°C Humidity: 30%-85% Storage: Temperature: -20°C to 60°C Humidity: 30%-85%
Power requirement	AC 100-240 V, 50 - 60 Hz, 2.5A
Power consumption	240 W
Dimension (W x D x H)	279.5 x 218 x 105 mm
Weight	2.7 kg (6lb)
Note: Design and Specifications are subject to change without prior notice.	

1.2 Location of features, Controls, and I/O

A. Projector overview


Front View

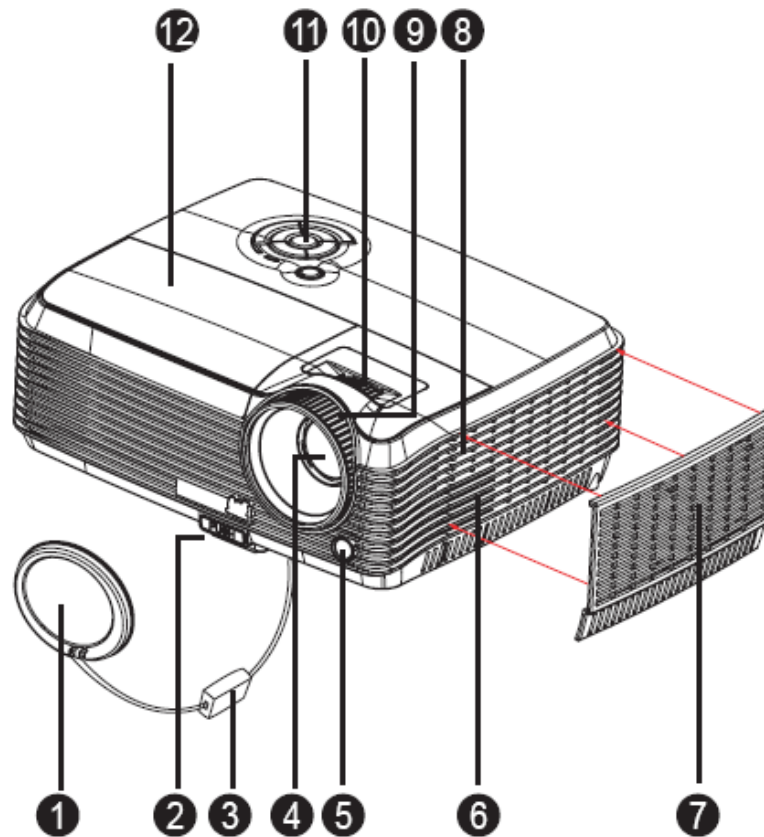

- 1. Lens cap
- 2. Elevator button
- 3. Lens cap strap
- 4. Projection lens
- 5. Front IR remote control sensor
- 6. Ventilation holes (intake)


- 7. Filter cover
- 8. Speaker
- 9. Focus ring
- 10. Zoom ring
- 11. Control panel
- 12. Lamp cover

Real View

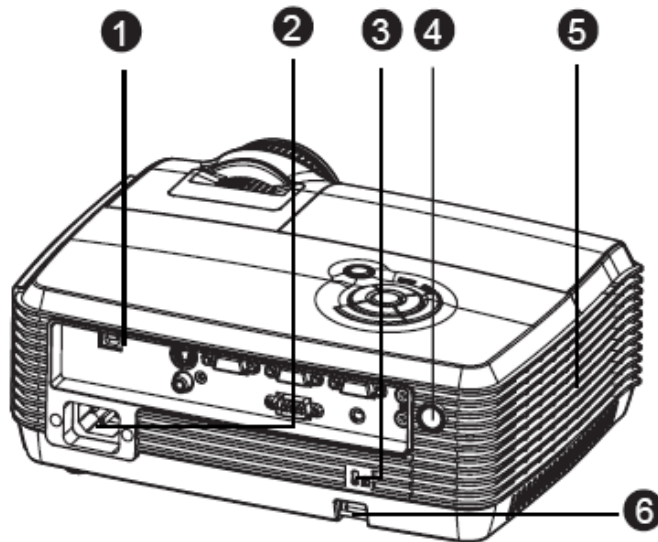


- | | |
|--------------------------------|----------------------------------|
| 1. Connection ports | 2. AC power socket |
| 3. Kensington lock | 4. Rear IR remote control sensor |
| 5. Ventilation holes (exhaust) | 6. Security bar |

Bottom View

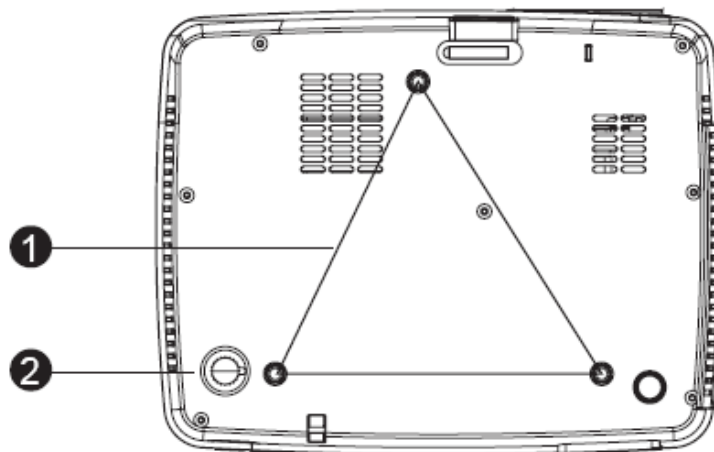


- | |
|-------------------------|
| 1. Ceiling mount (M4*6) |
| 2. Tilt-adjustment feet |

B. Button function and LED indicator

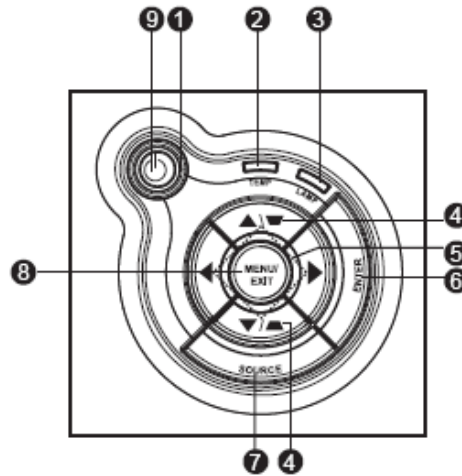

LED

1.  **Power** (Power LED indicator)
2. **Temp** (Temperature LED indicator)
3. **Lamp** (Lamp LED indicator)

Button function

4.  **Keystone**

Manually correct distorted images resulting from an angled projection.

5. **Four directional buttons**

Use four directional buttons to select items or make adjustments to your selection.

6. **Enter**

Enter to sub-menu and confirm the menu selection.

7. **Source**

Manually select an input source.


8. **Menu/EXIT**

Display or exit the on-screen display menus.

9.  **Power**

Turn the projector on or off.

C. Connection ports

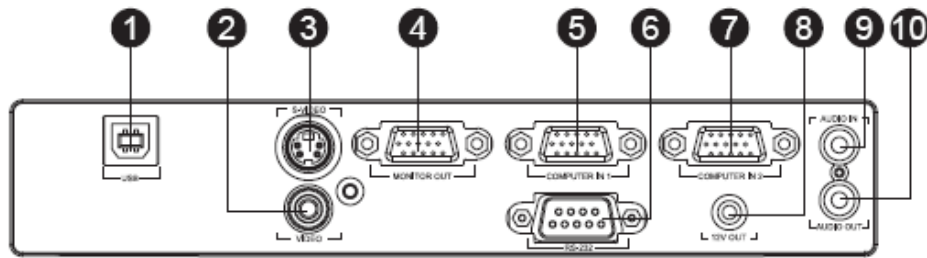

1. USB

This connector is for firmware update and mouse function support.

2. Video

Connect composite video output from video equipment to this jack.

3. S-Video

Connect S-Video output from video equipment to this jack.

4. MONITOR Out

Connect to a computer display, etc.

5. COMPUTER IN 1

Connect image input signal (analog RGB or component) to this jack.

6. RS-232

When operating the projector via a computer, connect this to the controlling computer's RS-232C port.

7. COMPUTER IN 2

Connect image input signal (analog RGB or component) to this jack.

8. 12V OUT

Control a motorized screen or similar accessory device.

9. Audio IN


Connect an audio output from video equipment to this jack.

10. Audio OUT

Connect to a speaker or other audio input equipment.

D. Remote Control

- ❶ **POWER**
Turn the projector on or off.
- ❷ **Four directional buttons**
Use four directional buttons to select items or make adjustments to your selection.
- ❸ **MENU**
Display or exit the on-screen display menus.
- ❹ **Enter**
Confirmed selections.
- ❺ **Exit**
Exit OSD Menu.
- ❻ **Keystone+ / -**
Adjust image distortion caused by tilting the projector.
- ❼ **Magnify**
Zoom in and out the images.
- ❽ **Source**
Manually select an input source.
- ❾ **Auto**
Resynchronize the projector to the input signal from a computer. This function is available for computer mode only.
- ❿ **Mouse**
Switch between OSD control and Mouse control (Apply to Navigation buttons, Enter/Mouse Left Click, and Exit/Mouse Right Click buttons).
- ⓫ **ViewM**
Switch in between high brightness performance or Accuracy color performance.

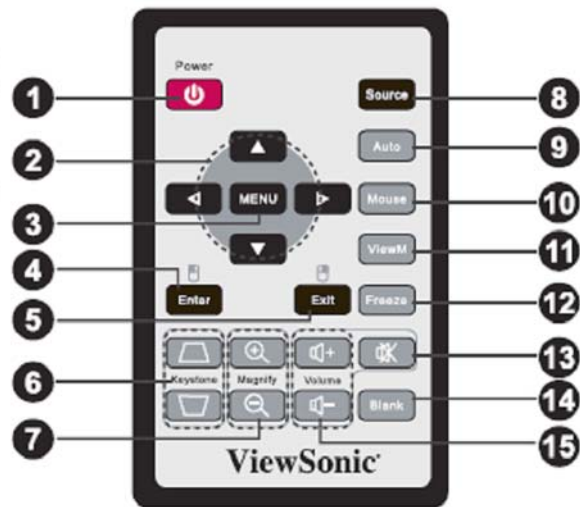

- ⓫ **Freeze**
Press "Freeze" to pause the screen image. Press again to cancel the freeze function.
- ⓬ **Mute**
Cut off the sound temporarily. Press again to cancel the Mute function.
- ⓭ **Blank**
Cut off the screen temporarily. Press again to cancel the Blank Screen function.
- ⓮ **Volume + / -**
Adjust the volume level.

1.3 PJD6211 Lamp Specification

Product Scope

The product is a lamp system consisting of a short arc burner within a reflector and electronic lamp driver.

Type lamp	P-VIP 180/0.8 E20.8 open type
	Identcode : A 599 899
Type driver	PT VIP O3 MID(180W)-UNISHAPE
	Identcode : A581 105 (lock type, Gen5, VC, SL)
	A581 111 (lock type, Gen5, VC, DL)

The lamp must be operated with the OSRAM lamp driver only.

Initial Characteristics

	<u>nominal</u>	<u>tolerance</u>
Input Voltage	380V DC	3 20...400V DC
Standby(non-operating)		120...400V DC
Max. slew rate of input voltage		
During switch on	30V / μ s	
Input Current	0.55A	
Max. input voltage ripple	30V _{pp} @ 100-120Hz	
Max. input current ripple	1Arms@40 -300kHz	
Input Wattage	max.210W@180W lamp wattage	
Input Wattage standby operation	1, 7W @380V DC	
Output Wattage		
nominal	180W	$\pm 3\%$ ⁷
DIM mode	1 60W	$\pm 3\%$ ⁶
controlled by UART	160W...180W	in step with of 1/128 of nominal power
Output current limitation	3.4A(RMS)	$\pm 5\%$
Ignition pulse	typ.2.6kVpeak symm.	2.4 ...3.5 kVpeak
Ignition Phase Duration	typ.3. 5s	max.6 s
Enable-Disable-Enable Cycle	15 s minimum	
Acoustic sound pressure level	typical acoustic sound pressure level 36 dB(A),maximum 38dB(A) at 25cm measuring distance; measured in steady state lamp operation ⁸	
Acoustic sound power level	typical acoustic sound power level 32 dB(A) acc. to EN ISO 3744; measured in steady state lamp operation ⁷	
Switch-off lamp voltage	140V	$\pm 5V$
Cooling method	forced air cooling at ≥ 1.5 m/s minimum	
Thermal Protection	Tc1 switch point 90°C	$\pm 5^\circ\text{C}$

Safety Protections

The lamp connections are not mains isolated, The lamp can be switched on via the Start Control Input signal(SCI). A Flag Output signal indicates if the lamp has lit rightly. The Start Control Input and the Flag Output are mains isolated.

Note:

⁷ Measured at real lamp load. Deviations will occur on all kind of artificial loads (e.g. resistor)

⁸ Measured with RGB waveform. The noise deviation from customer generated UNISHAPE waveforms should be controlled by the official approval process.

Attention for handling


- ◆ Do not touch the lamp until it has cooled completely, because the lamp is very hot during operation and immediately after turned off.
- ◆ The lamp has to be fixed firmly to the base or socket.
- ◆ Turn off the power supply during maintenance.
- ◆ Do not hold the lamp except outer surface of the reflector.
- ◆ Wear protective gloves and eyeglasses when handling the lamp.
- ◆ Any unusual shock or vibration to the lamp should be avoided.
- ◆ The lamp contains the mercury. Its breakage might cause mercury to flow out of the reflector. Please manage provision at the customer's product.
- ◆ Do not pull the lead wire and plug by more than 24.5N.
- ◆ Please be careful of handling the lamp because it is made of glass.
- ◆ Please notice for keeping or handling the lamp, because there is a projection of this lamp with reflector ahead.
- ◆ Do not touch the bulb and the mirror area of the reflector.

Attention for use

- ◆ Do not close or cover the lamp with any flammable stuff.
- ◆ During operation, the lamp is under extremely high pressure. Please manage provision at the customer's product to prevent fragments of bulb and mercury from flowing out of it. If the lamp bursts in case of an emergency, the sound will be occurred.
- ◆ Lamp operation should be with the specified lamp driver and the system ONLY.
- ◆ Do not look at the lamp directly during operations.
- ◆ Do not expose your skin directly. We recommend to you to put on something for protection for your skin. For example, long sleeve shirt, gloves, glasses and so on.
- ◆ Do not modify the lamp and never use a lamp that has been modified.
- ◆ Any unusual shock or vibration to the lamp should be avoided during operation.
- ◆ Do not use any broken lamps.
- ◆ Dispose of used lamps according to your local instruction.
- ◆ Do not turn on the lamp while the system is opened.

- ◆ The lamp contains mercury. If the lamp bursts during operation ventilate the area sufficiently to avoid inhaling harmful mercury fumes.
- ◆ Use the lead below 200 °C to prevent a deterioration of cladding clad of the fluorocarbon resin.
- ◆ The lead wire insulation clad shouldn't touch the reflector.
- ◆ Exchange the lamp that has already passed the life time immediately.

1.4 PJD6211 System Block Diagram

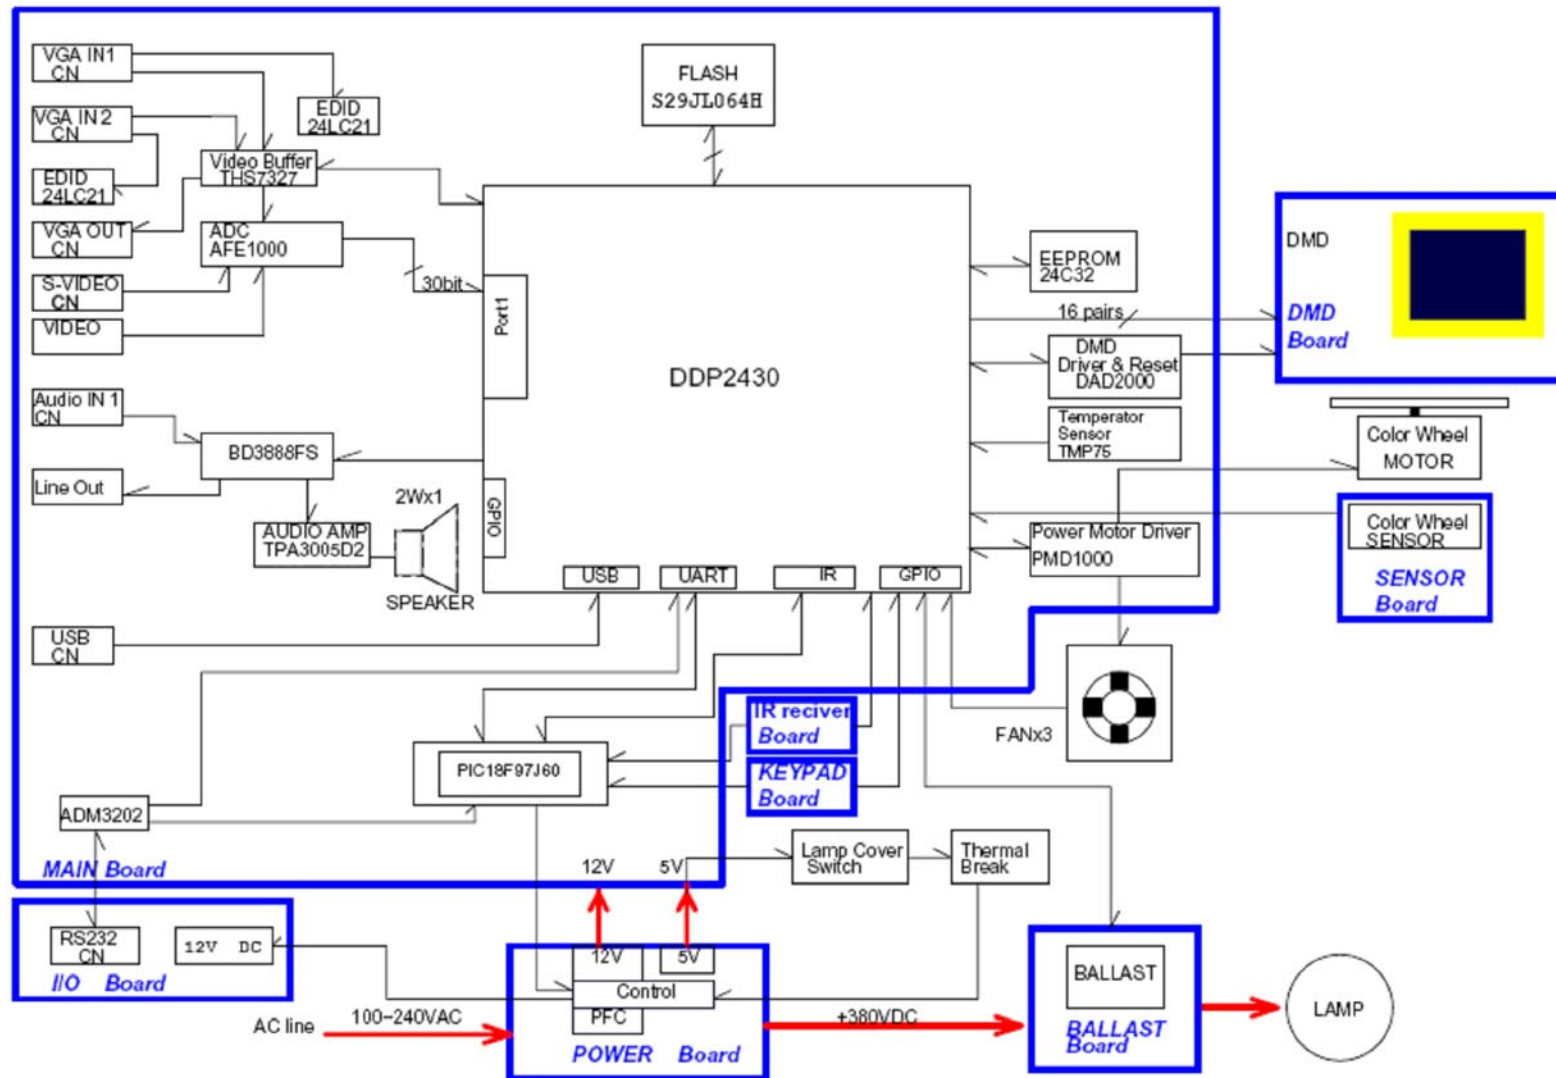

2. Firmware Upgraded Flow

This chapter provides the information regarding relevant equipments and upgrading procedure for firmware upgrade.

Note:

1. Please check the firmware and composer version before any firmware upgrade procedures. During firmware download period, please do not shut down PC or projector, this will cause flash memory's damage. And need to return the unit to manufacturer for flash memory recovery.
2. Computer for operation must be Window XP or more advanced.

2.1 Setup Tool/Equipment


- Computer
- USB Cable (See the picture)
- Power Cord




2.2 Upgrading Procedure

Installing [DLP Composer (TM) Lite]

1. Double-click [**DLP Composer Lite v9.2 Setup.exe**].
2. Installation starts. Click [**Next**] to continue the installation process.
3. On the [**License Agreement**] screen, move the scroll bar on the right to the bottom, select [**I accept and agree to be bound by all the terms and conditions of this License Agreement**], and click Next to continue the installation process.
4. On the Select [**Installation Type**] screen, select [**ALL**] and click [**Next**] to continue the installation process.

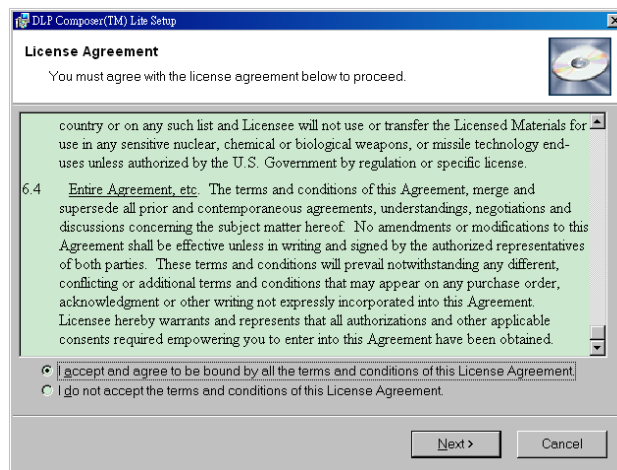


5. When the installation is finished, click [**Finish**] and reboot the PC. (A shortcut to DLP Composer (TM) Lite is created on the desktop.)

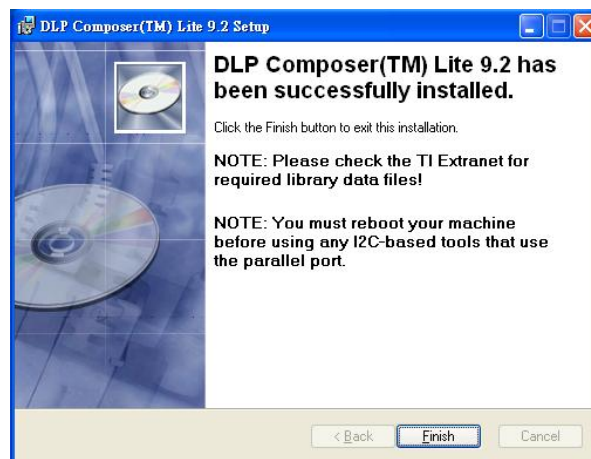


USB Support - Installation (All Platforms)

This release includes support for a USB communications interface to DDP2 230/DDP2430 based projectors. The setup program includes the files needed to install USB support. After DLP Composer™ Lite is installed, to install the USB support, choose the "Install DLP Device USB Driver" icon under "DLP Composer™ Lite" in your Start menu.

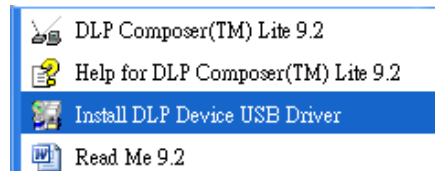

Follow the instruction on the screen to press any key and wait for the installation done.

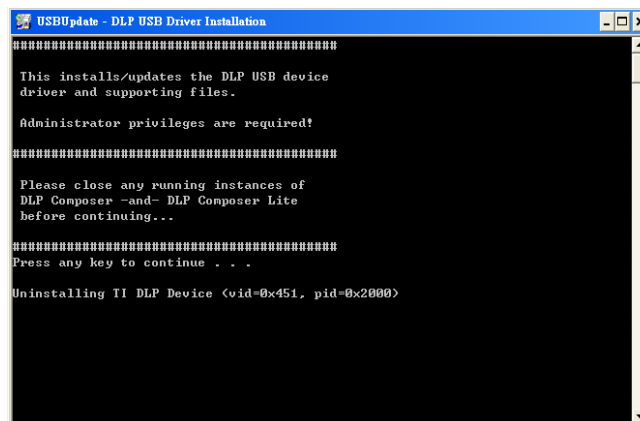


And copy the file "FlashDeviceParameters.txt" into the C:\ Program Files\ DLP Composer Lite
X.X

Operating procedure


1. Connect the Projector and PC via USB cable.
2. Double-click [DLP Composer (TM) Lite 9.2]. The following screen will appear.




3. Select [Edit]/ [Preferences]/ [Communications] to check USB in [Projector Interface].
4. Set the items on the [Vendor 0x451, Product 0x2000] of [USB Device Identification].
5. Click [OK].

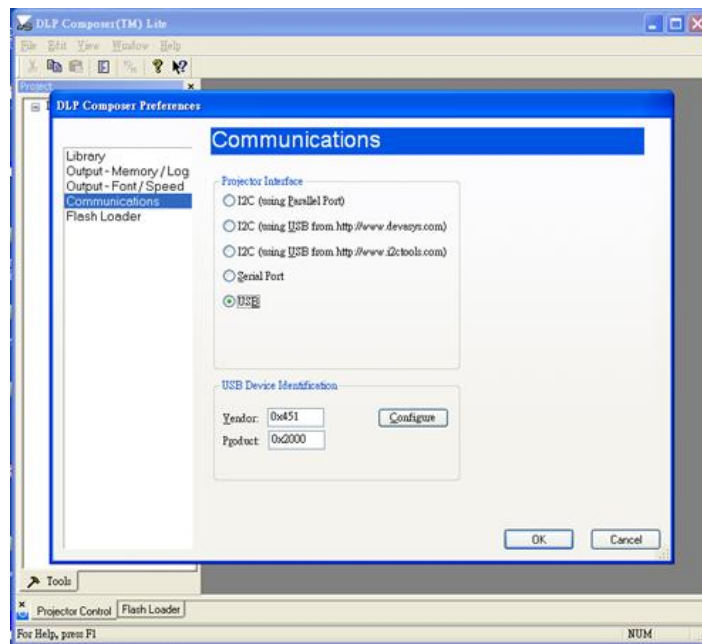

6. Move the cursor to **[Flash Loader]** on the Project window of **[DLP Composer Lite]**. (The **[Flash Loader]** screen will appear.)
7. Click **[Browse]** and select where the firmware **[xxxxxxxxx.img]** is for download.
8. Make sure **[Skip Boot Loader Area]** is with a check.
9. Press **Menu** and **Power** buttons constantly and then give power supply (switch power on). Temp LED and Lamp LED will become amber. That indicates the projector is in the download mode. At this moment, you can release these two buttons.
10. Click **[Reset Bus]** firstly to check if USB connects well.
11. Click **[Start Download]**. When the dialog box is displayed, click **[Yes]**.

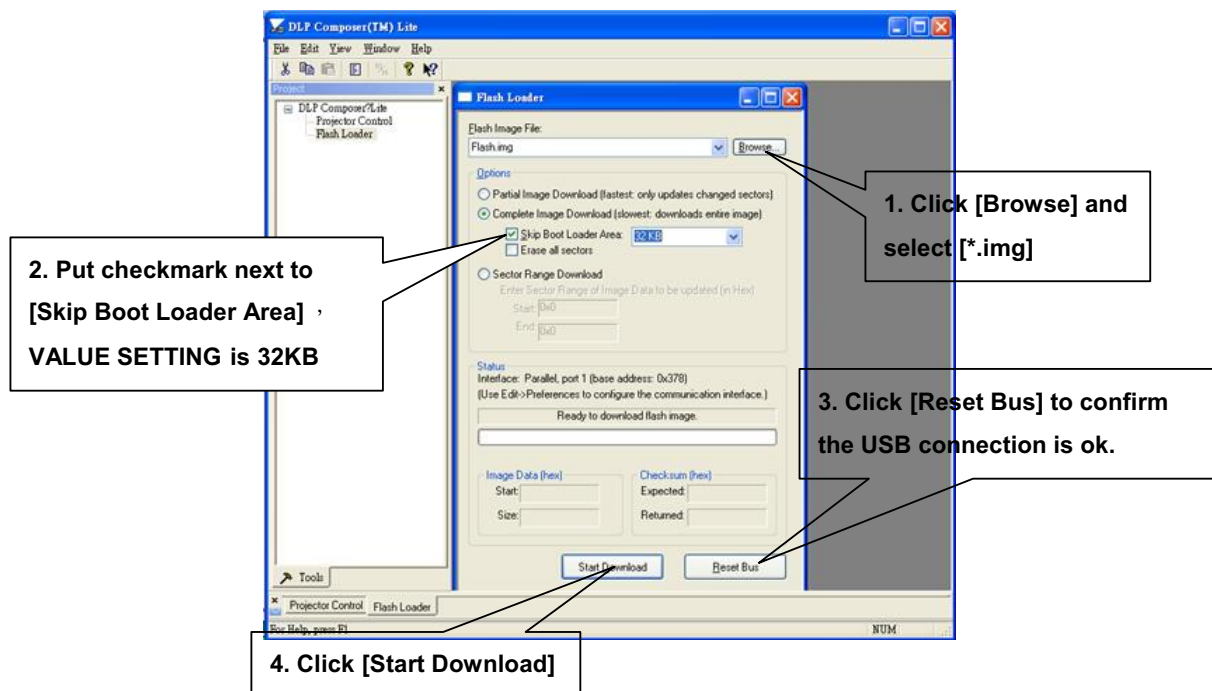

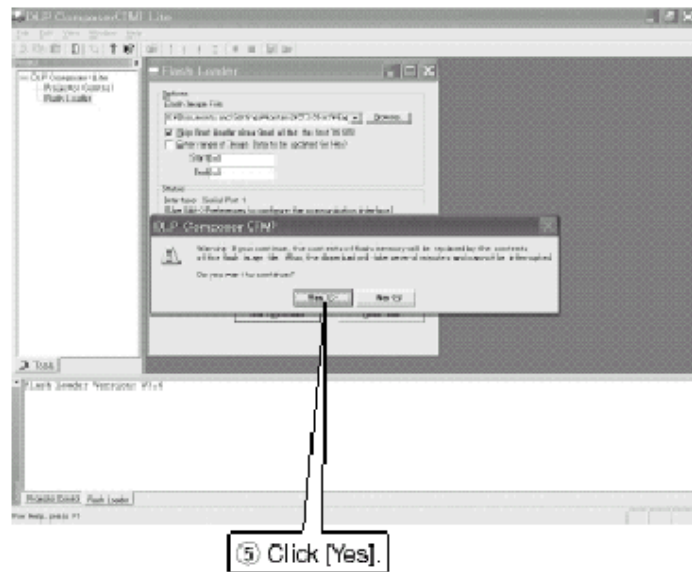






12. Wait for the Completion of Burning and then remove Power Cord and USB Burning Cord.

3. Machine Disassembly and Replacement




3.1 Tools




Item	Photo
Long Nose Nipper	
Hex Sleeves 5mm	
Screw Bit(+):107 Screw Bit(+):101 Screw Bit(+):102	
Anti-static wrist strap	
Anti-static wrist gloves	




3.2 Disassembly Procedure




Warning


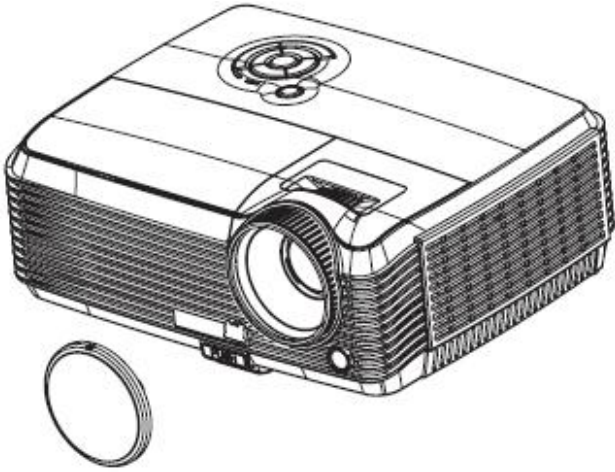
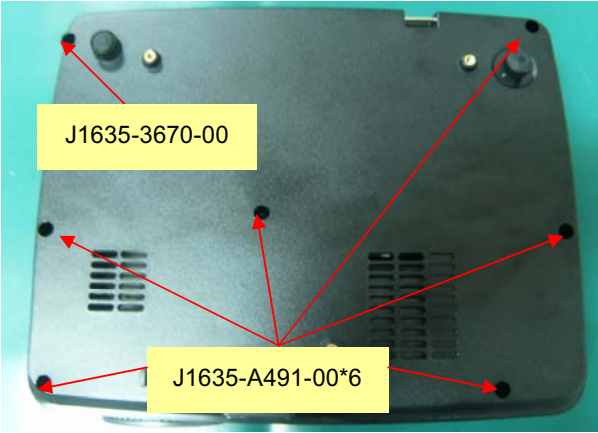
- ◆ Put on the Static Electricity Ring when starting for repair.
- ◆ Repair Environment suggest in Clean-room class 10000. Do not remove Optical Engine or DMD panel outside the clean room. Please return the optical engine to supplier if your repair condition can not meet the requirement.
- ◆ While screwing or unscrewing screws, please keep the screwdriver straight. Keeping screwdriver inclined will damage the screw holes.
- ◆ Please turn off the power before replacing any parts.
- ◆ Please wait for the projector lamp cooling down and turn off the power before changing it. Never touch or hit the lamp module when replacing the lamp.
- ◆ When you replace the projector lamp, never touch the new lamp with your bare hands. The invisible residue left by the oil on your hands may shorten the lamp life. Use lint-free gloves or finger cots are recommended.

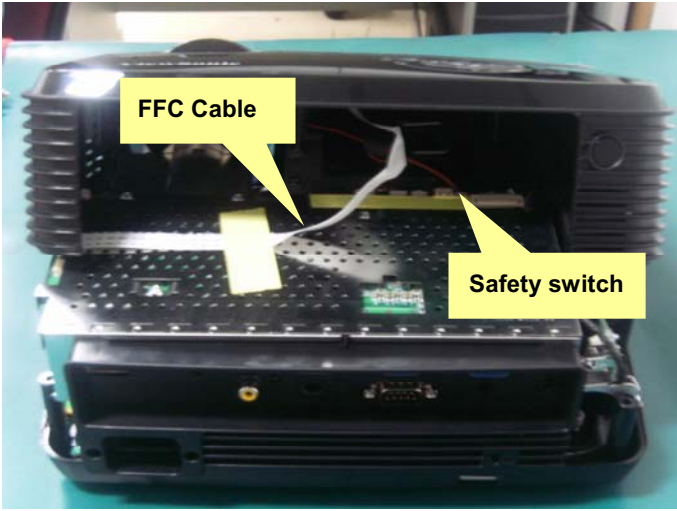
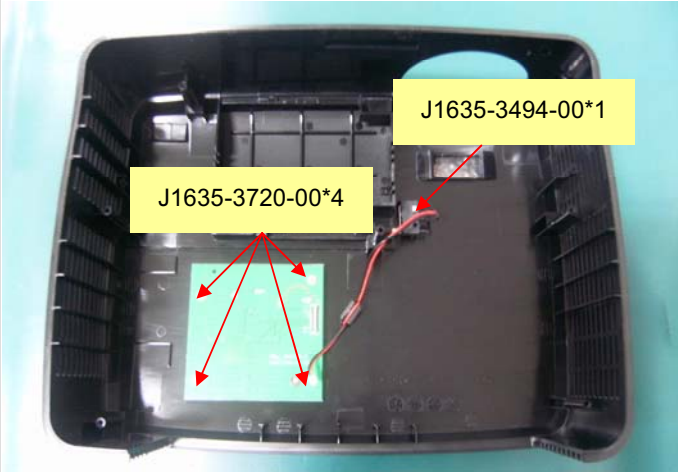
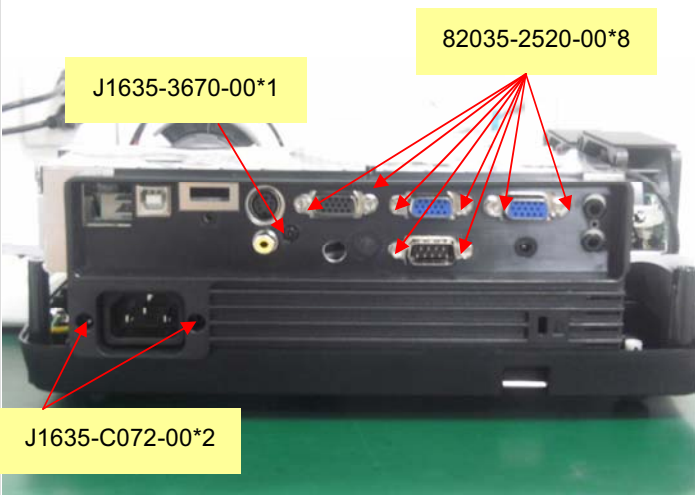
Step	Figure	Description
1		<p>Press the power button to shutdown the projector and disconnect the power cord.</p> <p>If the lamp is hot, please do not start any procedure until the projector lamp cools down.</p> <p>Flip the projector and remove the lens cover.</p>
2		<p>1. Flip the projector on the table.</p> <p>2. Remove the screws J1635-A491-00*6 and J1635-3670-00*1 on the Bottom cover as shown.</p>
3		<p>Rotate the Focus Ring by forward sequence to take it off from the unit.</p>

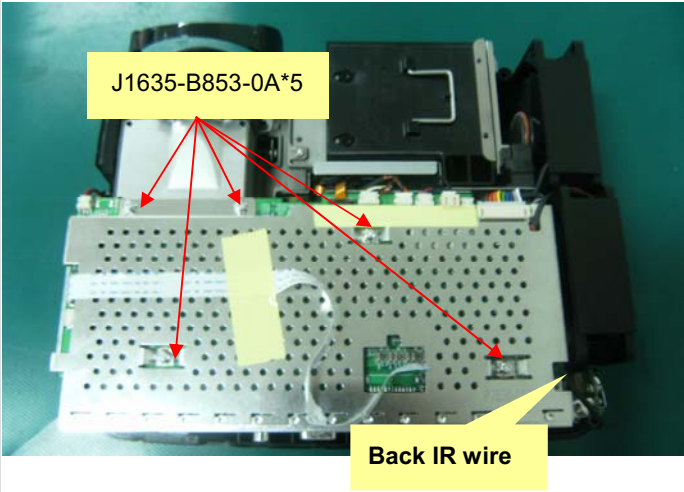
Step	Figure	Description
4	 <p>FFC Cable</p> <p>Safety switch</p>	<ol style="list-style-type: none"> 1. Disconnect the FFC cable and safety switch between top cover and main board. 2. Raise the Top Cover.
5	 <p>J1635-3494-00*1</p> <p>J1635-3720-00*4</p>	<ol style="list-style-type: none"> 1. Loosen the one screw to remove the safety switch. 2. Remove four screws to lift up the keypad board.
6	 <p>J1635-3670-00*1</p> <p>82035-2520-00*8</p> <p>J1635-C072-00*2</p>	<ol style="list-style-type: none"> 1. Remove all screws as shown. 2. Remove the IO cover.

Step	Figure	Description
7		<p>1. Remove the five screws on the Main Board.</p> <p>2. Remove the metal sheet of Main Board.</p> <p>Note: The Back IR wire is connected to Main Board through the hole on metal sheet.</p>
8		<p>Remove the two Fan Modules.</p>
9		<p>1. Show you what the connector should be.</p> <p>2. Remove all wires.</p> <p>3. Remove the Main Board.</p>

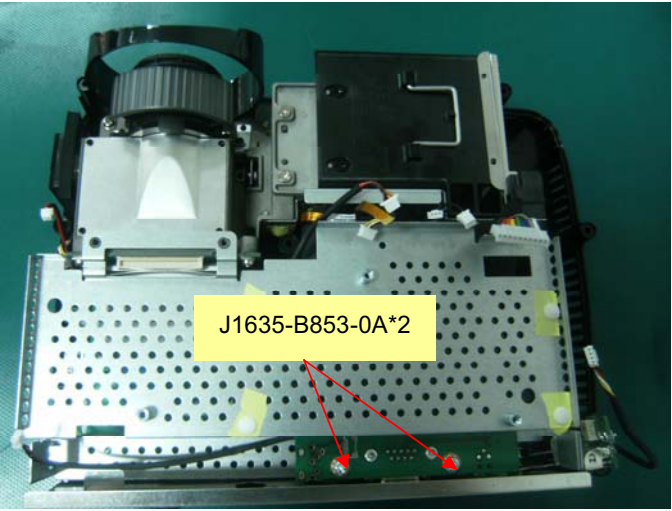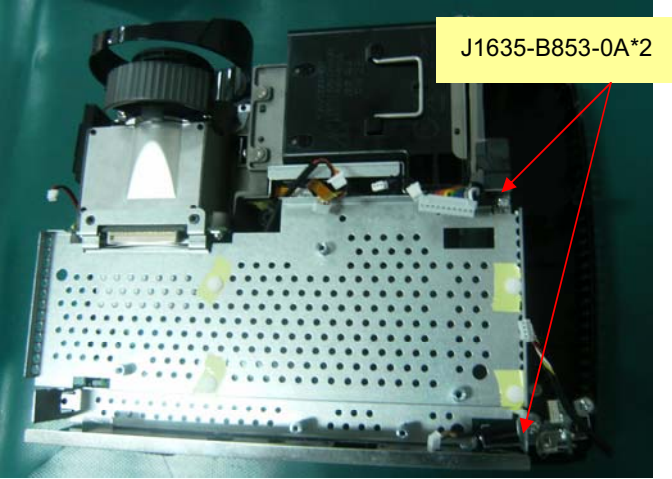
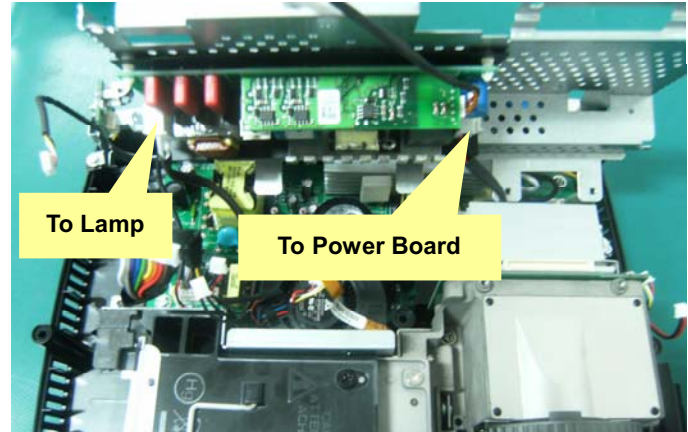
Step	Figure	Description
10		<p>1. Loosen the two screws as shown and remove all wires on RS232 Board.</p> <p>2. Remove the RS232 Board.</p>
11		<p>Loosen the two screws as shown to remove the metal sheet of Ballast.</p>
Note		<p>Note: 2 wires have been connected to Ballast. Disconnect these 2 wires before remove the metal sheet.</p>

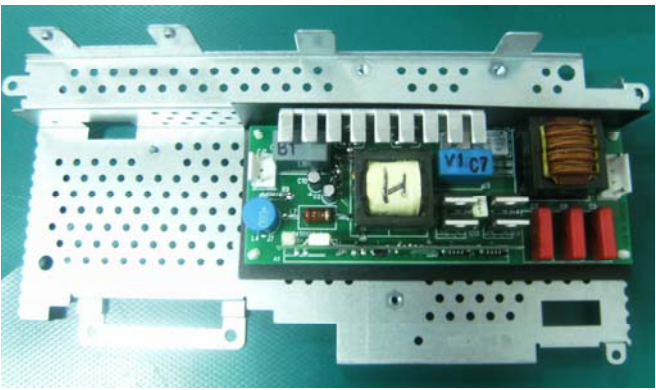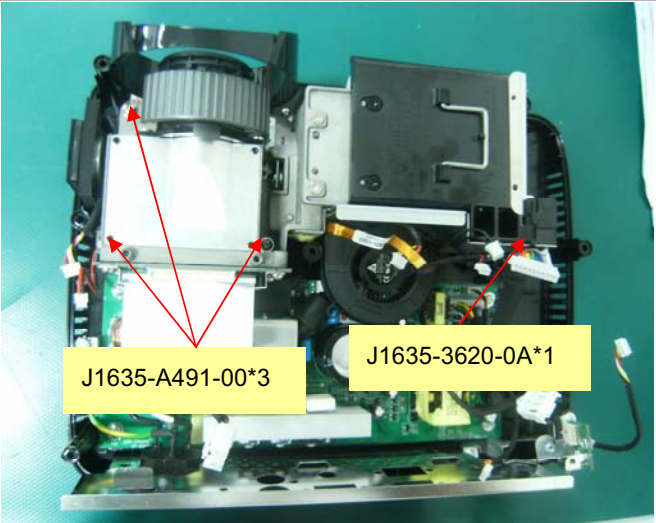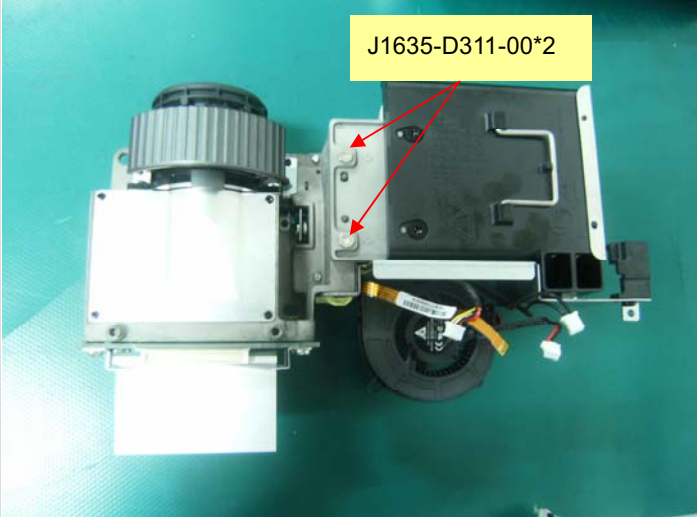Step	Figure	Description
12		Release the four pillars by Long Nose Nipper to remove the Ballast.
13		<ol style="list-style-type: none"> 1. Remove the screws on the optical engine. 2. Remove the optical engine module.
14		<p>Loosen the two screws and remove the lamp module from optical engine.</p> <p>Note: Those screws and mesh are included in the Lamp module.</p>

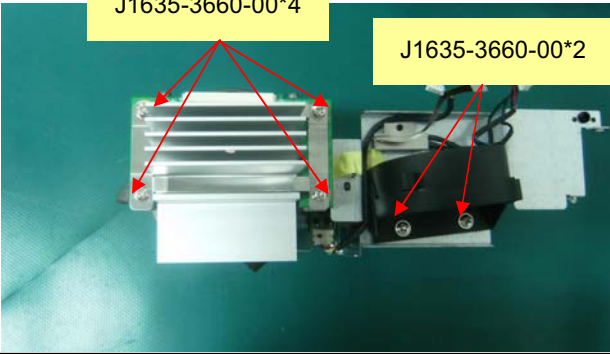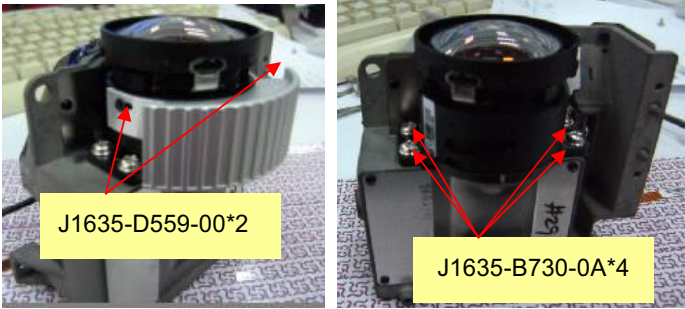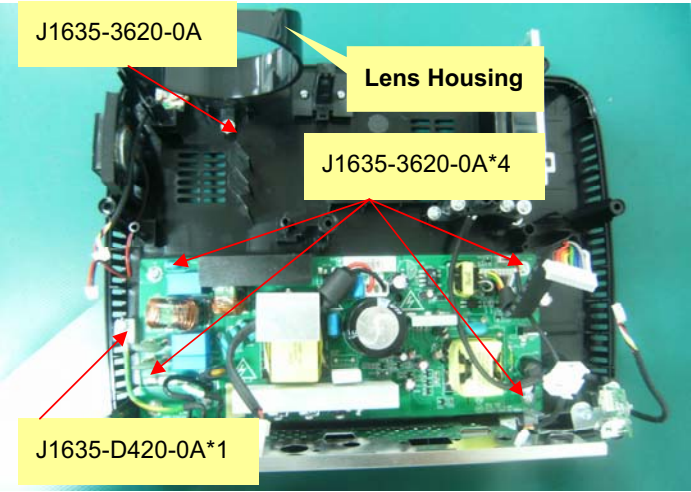Step	Figure	Description
15		<ol style="list-style-type: none"> 1. Loosen the two screws on the OE Fan. 2. Remove the Fan. 3. Loosen the four screws on DMD Board. 4. Remove the heat sink and DMD Board.
16		<ol style="list-style-type: none"> 1. Loosen the two screws on the Zoom Ring. 2. Remove the Zoom Ring. 3. Loosen the four screws on the Lens. 4. Remove the Lens carefully.
17		<ol style="list-style-type: none"> 1. Loosen the one screw and remove the Lens Housing. 2. Loosen the screws on the Power Board and then remove the Power module from Bottom Cover.

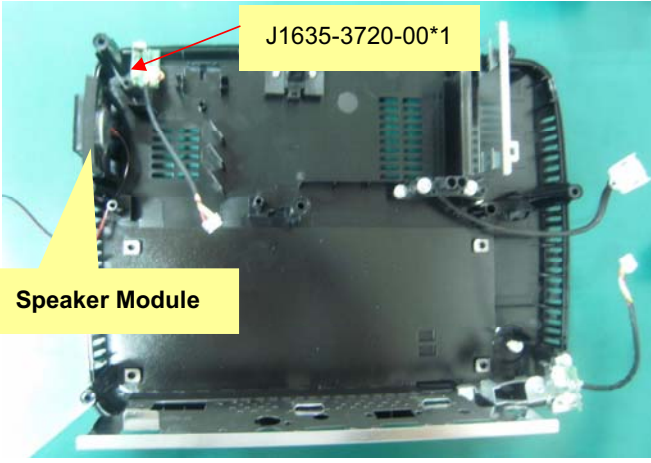
Step	Figure	Description
18		<p>1. Remove Speaker Module.</p> <p>2. Loosen the screws and remove front and back IR.</p>

3.3 Assembly FAN Module

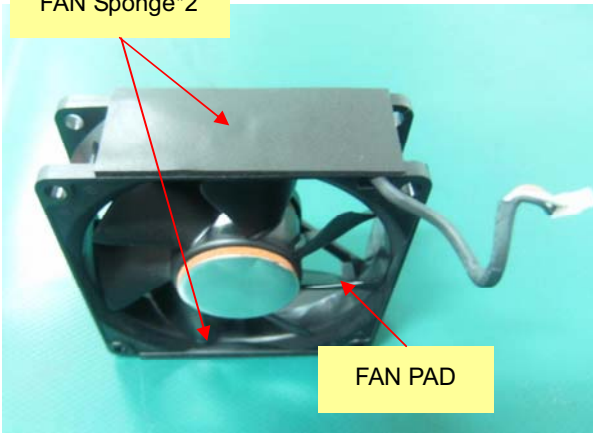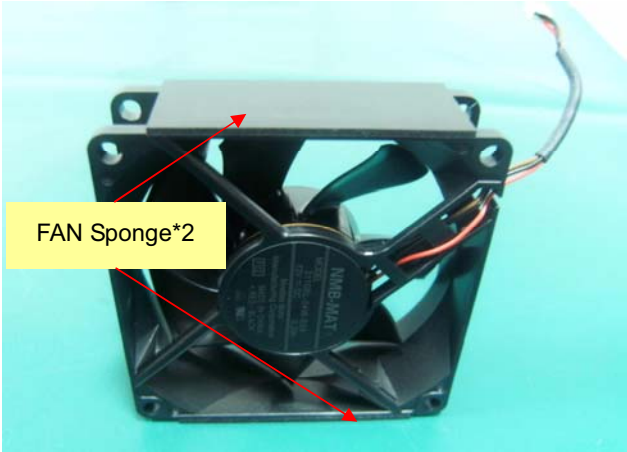Step	Figure	Description
1		<p>Assemble FAN2(J2394-0101-01):</p> <p>1. Paste the FAN PAD (P4E38-1070-00) on the middle of it.</p> <p>2. Paste the FAN Sponge*2 (P4R38-1530-00) on the top and bottom of it as picture shown.</p>
2		<p>Assemble FAN1(J2394-0101-00):</p> <p>Paste the FAN Sponge*2 (P4R38-1530-00) on the two edges of it as picture shown.</p>

3.4 Disassembly Lamp Module

As the projector operates over time, the brightness of the projector lamp gradually decreases and the lamp becomes more susceptible to breakage. We recommend replacing the lamp if a warning message is displayed. Do not attempt to replace the lamp yourself. Contact the qualified service personnel for replacement.

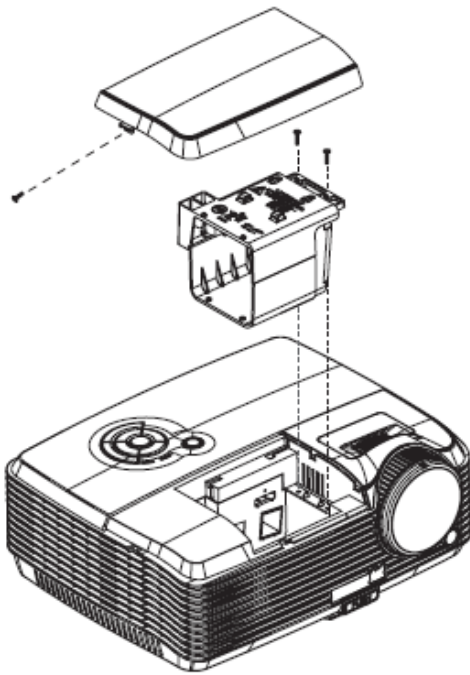Step	Figure	Description
1	<p>Note: Turn on the projector. If the lamp does not turn on after the warm-up period, please reinstall the lamp.</p> 	<ol style="list-style-type: none"> 1. Turn off the projector. 2. If the projector is installed in a ceiling mount, remove it. 3. Unplug the power cord. 4. Loosen the screw in the side of the lamp cover and remove the cover. 5. Remove the screws from the lamp module, raise the handle, and lift out the module. 6. Insert the new lamp module into the projector and tighten the screws. 7. Replace the lamp cover and tighten the screw. 8. Turn on the projector. If the lamp does not turn on after the warm-up period, try reinstalling the lamp. 9. Reset the lamp hour. Refer to the "Setting" menu.

4. Troubleshooting and Verifying the Repair

This chapter provides technicians with electronic background how to maintain the product. Moreover, you can get the appropriate operation to solve some complicated problems of component repairing and professional problems.

4.1 Troubleshooting

Warning

- Do not directly look into the lens to avoid eyesight damages.
- The projector is equipped with ventilation holes (intake) and ventilation holes (exhaust). Do not block or place anything near these slots, or internal heat build-up may occur, causing picture degradation or damage to the projector.


Confirm Software and hardware

(1) Confirm FW version is latest and lamp hours.

How to enter Engineering Mode?

-Open the Main menu and move the color bar to “setting” item, and then press right button to enter sub-menu. Move down the color bar to “Lamp Hours” item, press the direction keypad following the actions below:

Right once, left twice, right three times, left four times ; Then you will enter the Engineering Mode.)

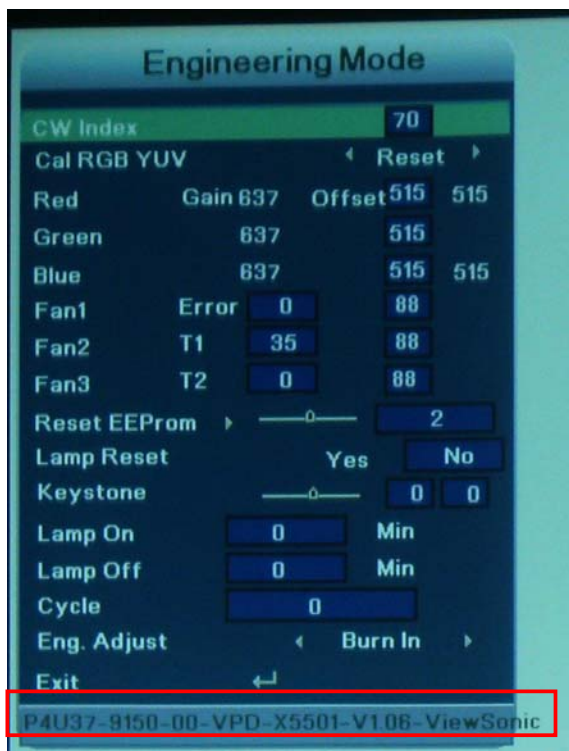


Note: This FW version is just for reference.


(2) Confirm LED indicator

LED Type	Color	Status	Meaning
Power LED	Blue	Solid(LED× 1)	The projector is in standby mode.
Lamp LED	Off	Off	
Temp LED	Off	Off	
Power LED	Blue	Solid(LED× 2)	Powering up
Lamp LED	Off	Off	
Temp LED	Off	Off	
Power LED	Blue	Solid(LED× 2)	Normal operation
Lamp LED	Off	Off	
Temp LED	Off	Off	
Power LED	Blue	Flash(LED× 2)	Power-down
Lamp LED	Off	Off	
Temp LED	Off	Off	
Power LED	Blue	Solid(Full brightness)	The projector system has some problems with its fans, so the projector cannot start up.
Lamp LED	Red	Solid	
Temp LED	Red	Flash	
Power LED	Blue	Solid(Full brightness)	The lamp is in good condition and is projecting at maximum brightness.
Lamp LED	Off	Off	
Temp LED	Off	Off	
Power LED	Blue	Solid(Full brightness)	The lamp has reached its end of life and must be changed soon. The lamp will continue to operate until it fails. Change the lamp. If the lamp is off, then the ballast will become malfunction.
Lamp LED	Off	Solid	
Temp LED	Off	Solid	
Power LED	Blue	Flash(Full brightness)	The projector is shutting and the fan motor is cooling the lamp for shutdown. Do not unplug the power cord or turn the power off before the Lamp LED changes to flashing. The fan motor will turn off when the lamp has cooled.
Lamp LED	Red	Solid	
Temp LED	Red	Solid	
Power LED	Blue	Solid(Full brightness)	Temperature is too high. The lamp will turn off. The fan motor is cooling the lamp.
Lamp LED	Red	Flash	
Temp LED	Red	Off	
Power LED	Off	Off	The lamp ignition failed. If temperature is too high, the fans will cool the lamp.
Lamp LED	Red	Solid	
Temp LED	Red	Solid	


Note: Swapping modules that may be defective with others known to be good is generally an ideal way to find the module responsible for the problem. A failure symptom is rarely caused by more than one module, so you will not usually need to replace more than one to correct a particular failure. Whatever main board, ballast, IR board, power board, lamp module or optical engine are all suitable to check by swapping modules.



Power Source Troubleshooting:

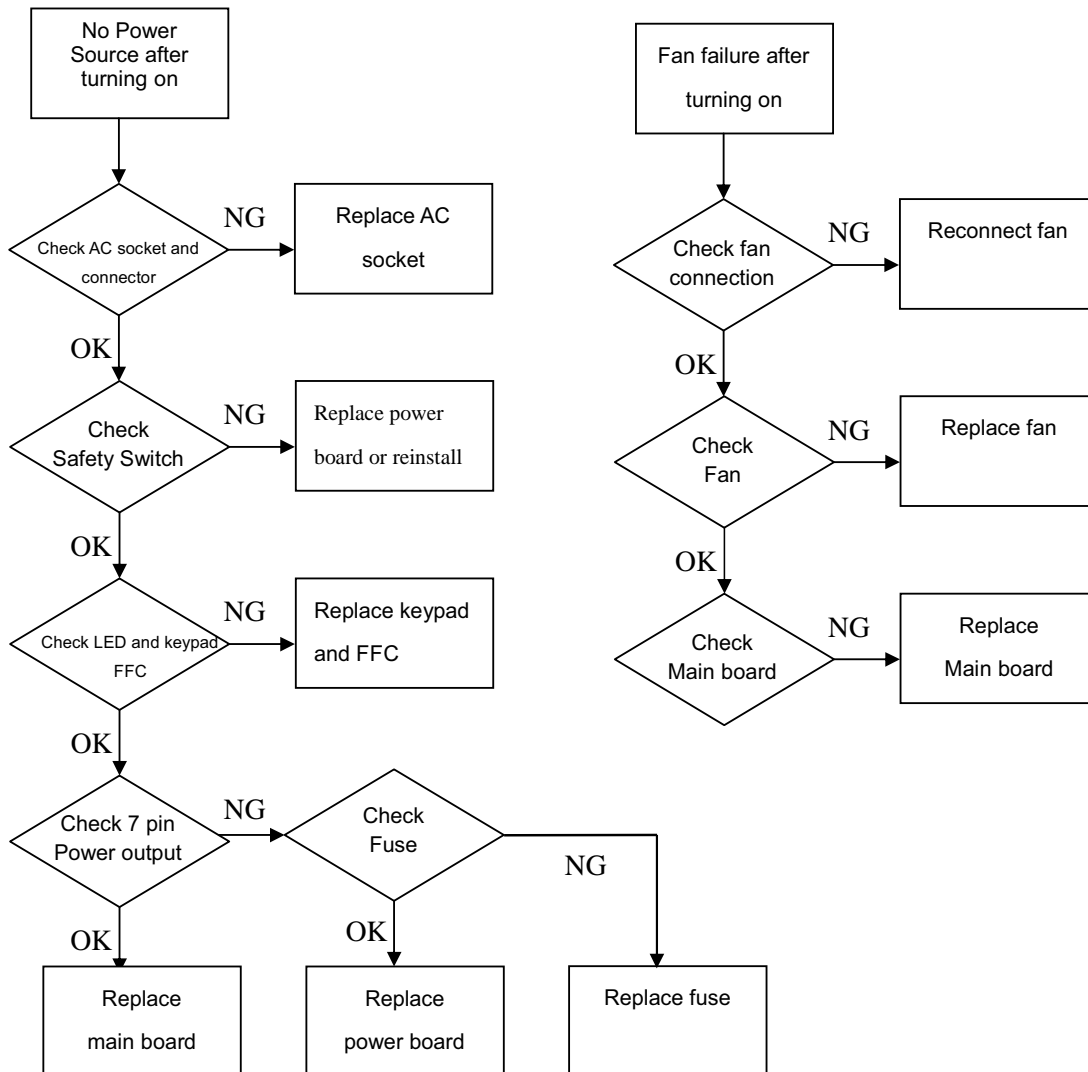

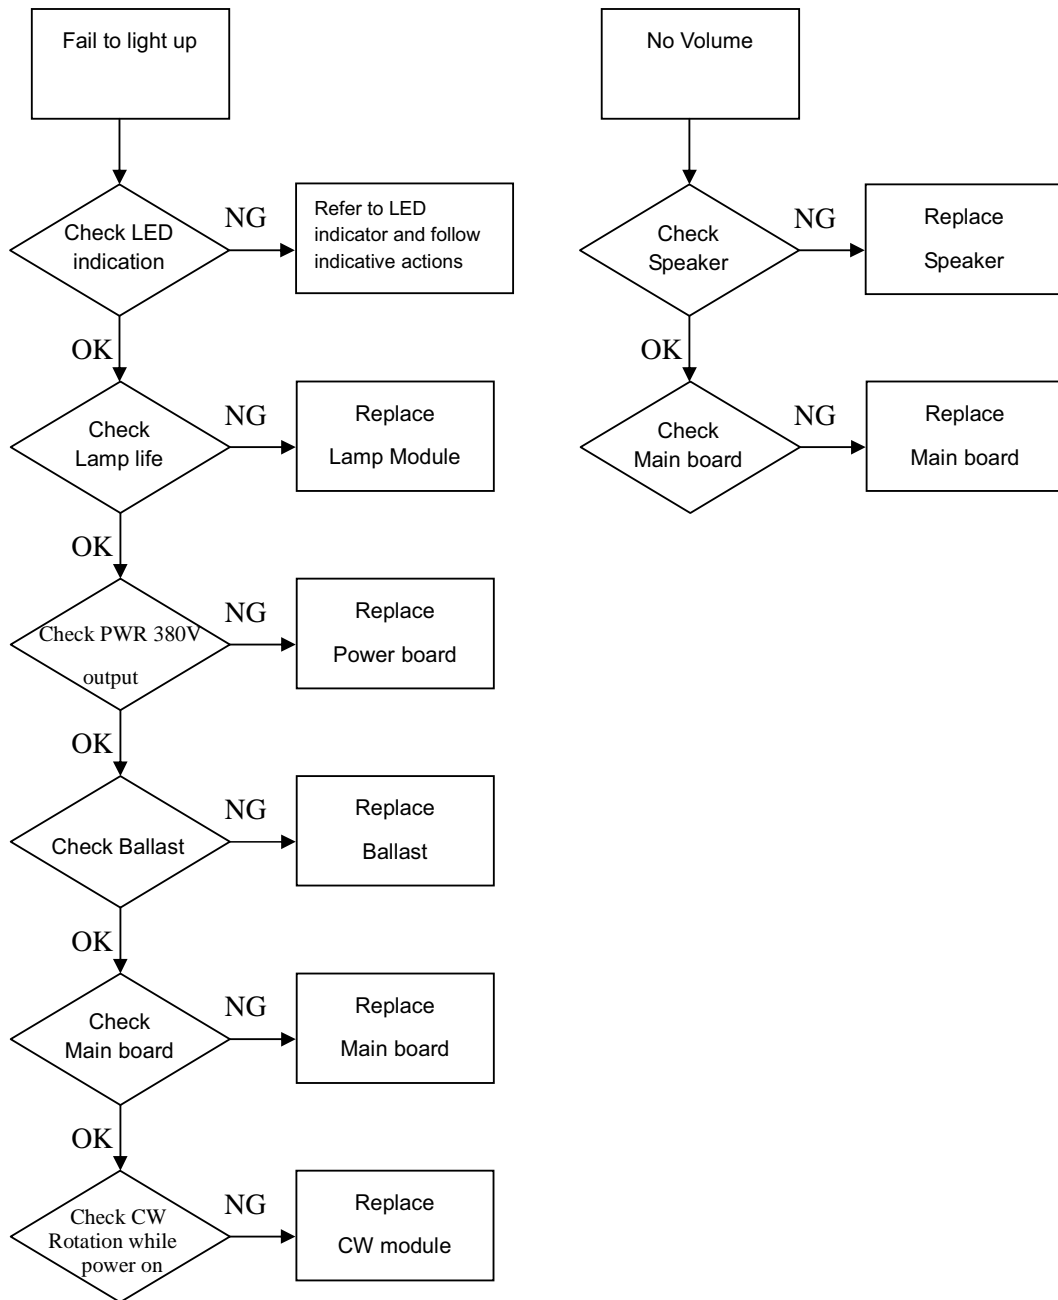


Signal Troubleshooting

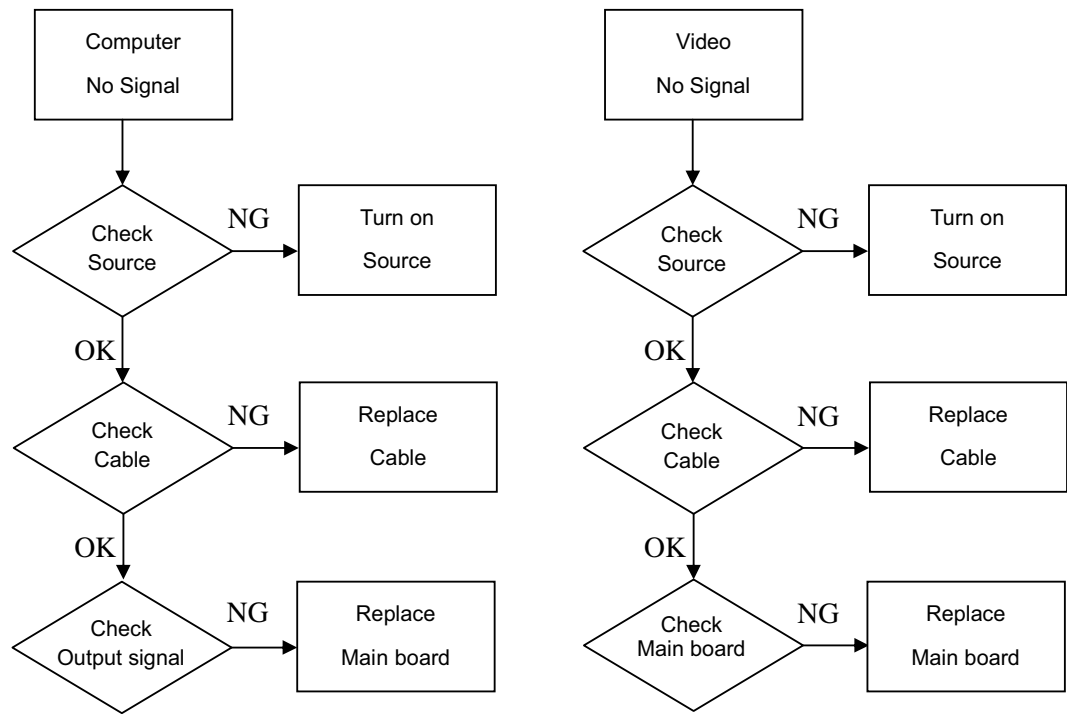

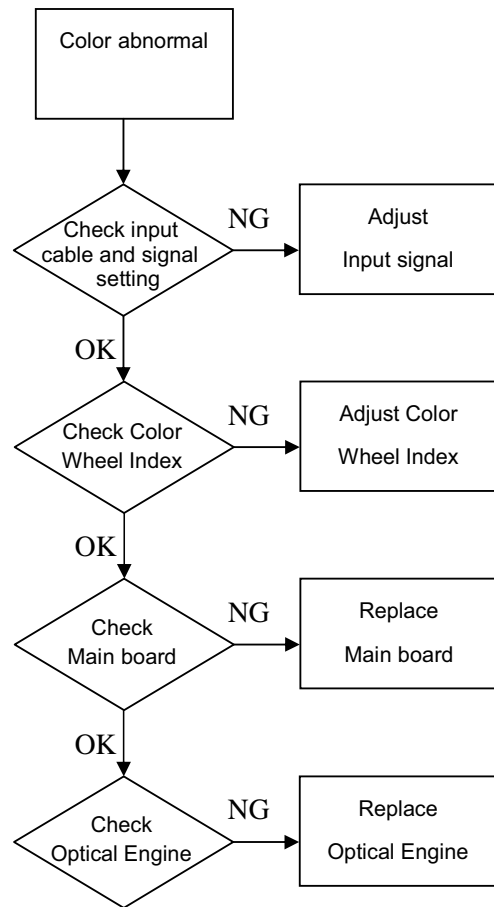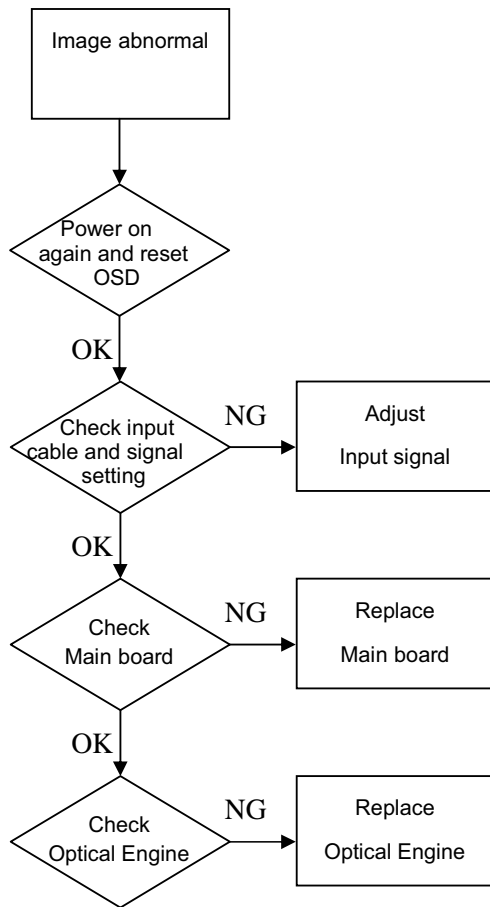

Operation Function Troubleshooting

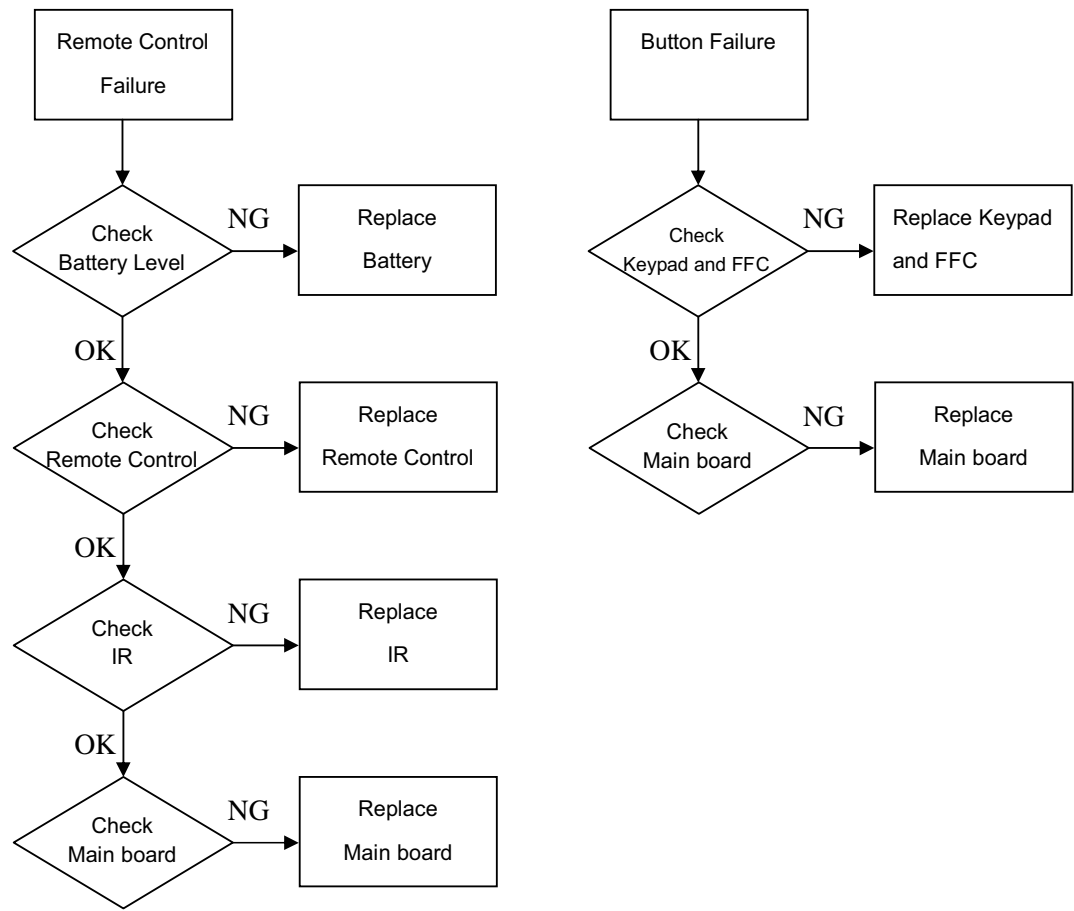

4.2 Verifying the Repair

After repairing projector (Disassembling and assembling projector), Repair center should verify the quality of repaired unit.

(1) Check Logo

Check Logo is correct after power on projector.



(2) Signal test (Each I/O can function normally)

Connect all connector to the jacks one after the other to check whether each channel can project normally.

I/O port	Monitor In (VGA)
Test Equipment	Standard Pattern generator (Ex. Quantum data)
Signal format	1024*768 60Hz

I/O port	Video
Test Equipment	Standard Pattern generator (Ex. Quantum data) or DVD player
Signal format	NTSC

I/O port	S-Video
Test Equipment	Standard Pattern generator or DVD player
Signal format	480i

I/O port	USB
-----------------	------------

Test Equipment	PC and Remote controller
Test method	1. Connect PC (laptop) VGA output to projector. Set PC (laptop) output signal to projector 2. Connect projector USB to PC. Press remote controller page up/down to scroll presentation file up and down (ex Microsoft office series)

I/O port	Audio input
Test Equipment	Connect audio input to audio output of DVD player
Signal format	480i

(3) Operation test

Buttons operation

Button description	Test criteria
Power button	1. Mechanical motion (Up & Down) should be free from getting stuck when pressing the button 2. Press “power” button and projector will switch on
Menu	1. Mechanical motion (Up & Down) should be free from getting stuck when pressing the button. 2. Press Menu button can make projector function normally.
4-way button	1. Mechanical motion (Up & Down) should be free from getting stuck when pressing the 4-way button. 2. Press 4-way button can be used to scroll through OSD (On - Screen Display) menus and make adjustments.
Source	1. Mechanical motion (Up & Down) should be free from getting stuck when pressing the button 2. Press Source button manually selects an input source

Foot adjuster operation

Foot adjuster.	Test criteria
Foot adjuster button	Foot adjusters should stretch downward smoothly by pressing the foot adjuster buttons on the two sides

Zoom ring and Focus ring

Ring	Test criteria
Zoom ring	Mechanical motion of rotating Zoom ring to the end of right and left by hand should be free from getting stuck.
Focus ring	The feeling of rotating Focus ring to the end of right and left by hand should free from seizing


(4) Image Quality



Projected image size: 60 inches (diagonal length)


Zoom ring: Adjust zoom ring to wide (Maximum projection size)

VGA

I/O port	Monitor In (VGA)
Test Equipment	Standard Pattern generator (Ex. Quantum data)
Signal format	1024*768 60Hz
Projected image size	60" in diagonal length

Test Pattern	Test criteria
	ANSI Brightness Apparent color strip, bend and streak corner on the projected image are not allowable.

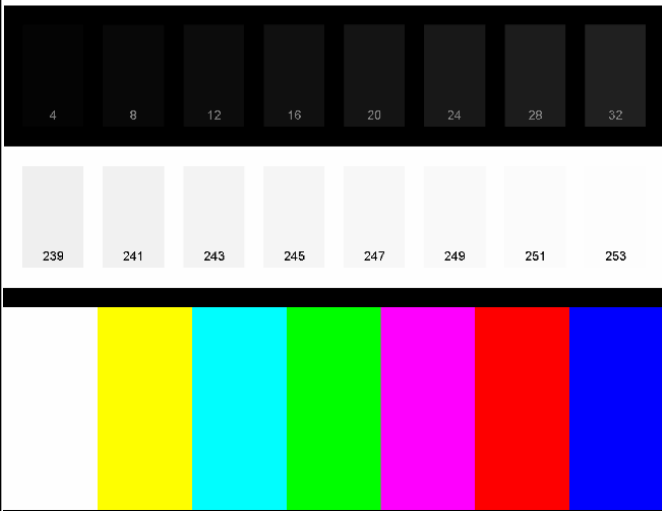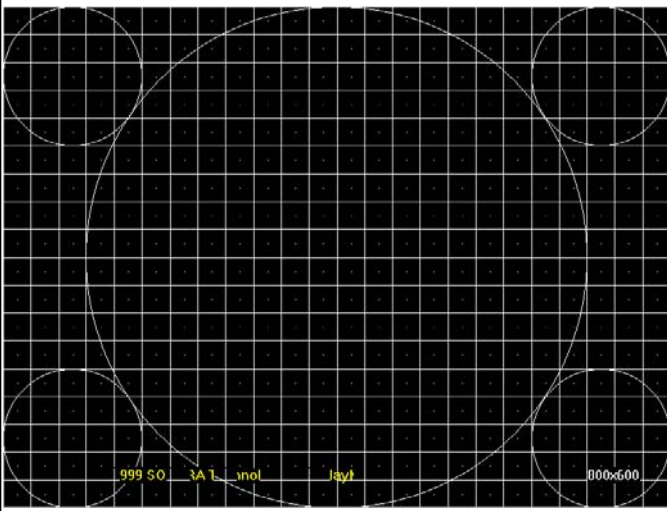	<h3>Extreme Gray-Scale</h3> <p>--0 represents full black, 255 represents full white.</p> <p>--Distinguishing the gray from black at the value of 32 and the gray from white at the value of 239 easily are acceptable.</p>
	<h3>Circular Geometry, Cross hatch and Dots</h3> <ol style="list-style-type: none"> 1. The four lines of outer frame should not only be existent but also distinguishable. 2. The dots in the square should be distinguishable.
<div> <p>Arial Font Size: 9 pixels 6.8 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. - We hold these truths to be self-evident, that all men are created equal, that they are endowed by their Creator with certain unalienable Rights, that among these are Life, Liberty and the pursuit of Happiness. - That to secure these rights, Governments are instituted among Men, deriving their just</p> <p>Arial Font Size: 10 pixels 7.5 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. - We hold these truths to be self-evident, that all men are created equal, that they are endowed by their Creator with certain unalienable</p> <p>Arial Font Size: 11 pixels 8.3 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. - We hold these truths to be self-evident, that all men are created equal, that they are endowed by their Creator with certain</p> <p>Arial Font Size: 12 pixels 9.0 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. -</p> <p>Arial Font Size: 13 pixels 9.8 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel</p> </div> <div> <p>Arial Font Size: 9 pixels 6.8 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. - We hold these truths to be self-evident, that all men are created equal, that they are endowed by their Creator with certain unalienable</p> <p>Arial Font Size: 10 pixels 7.5 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. - We hold these truths to be self-evident, that all men are created equal, that they are endowed by their Creator with certain unalienable</p> <p>Arial Font Size: 11 pixels 8.3 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. - We hold these truths to be self-evident, that all men are created equal, that they are endowed by their Creator with certain</p> <p>Arial Font Size: 12 pixels 9.0 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel them to the separation. -</p> <p>Arial Font Size: 13 pixels 9.8 points When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, and to assume among the powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle them, a decent respect to the opinions of mankind requires that they should declare the causes which impel</p> </div>	<h3>Scaled Text (Resolution)</h3> <ol style="list-style-type: none"> 1. Rotate Zoom ring to wide mode (Maximum projected image) 2. Fix projector to set diagonal length of projected image to 60". 3. Adjust focus ring to make resolution of 4 corners and center are balanced. 4. Check the characters should be recognized easily. 5. Rotate Zoom ring to tele mode (Minimum projected image) 6. Adjust focus ring to make resolution of 4 corners and center are balanced. 7. Check the characters should be recognized easily.

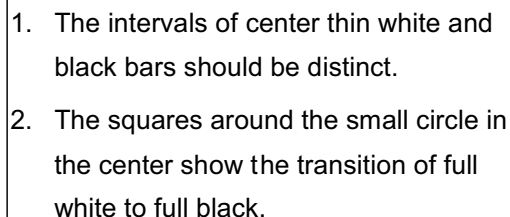


(6) Front and Rear infrared sensor

Device	Front and Rear infrared
Test Equipment	Remote controller
Test method	1. Cover front sensor and operate remote controller to test rear sensor 2. Cover rear sensor and operate remote controller to test front sensor

(7) Brightness measurements

Test items	Brightness measurements
Test Equipment	Chroma automatic system (The alternative is CL-200)
Test method	Measure 9 points
Criteria	Marketing spec 20% off

(8) Safety test equipments

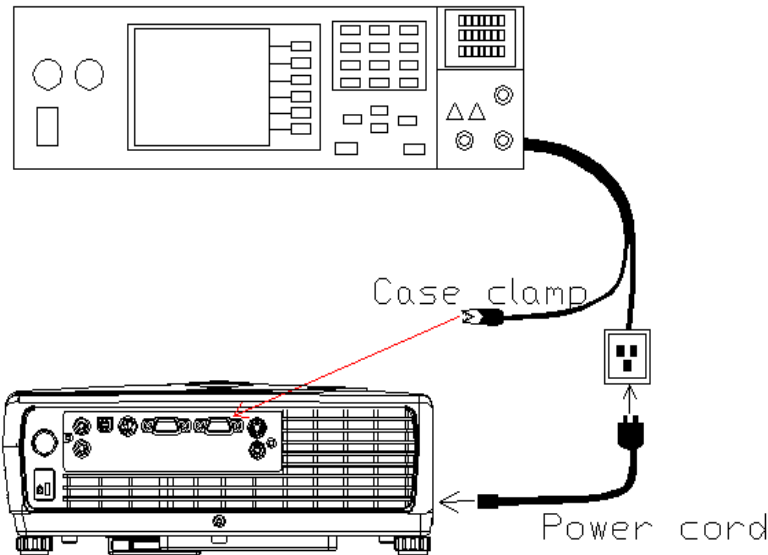Test items	Safety test
Test Equipment	Safety analyzer
Test method	<div>1. Clamp the metal shell of VGA connector</div> <div>2. Plug the power cord to socket</div> <div></div>
Test criteria	GND 30A 3sec 100m Ω DCW 2506V 1sec 10000uA Single Step OFF

(9) Cosmetic standard for repaired projector

Follow cosmetic standard for repair center.

5. Connector Information


This section provides each connector location on boards and function of each board. They will be useful for your detecting the defective boards.

5.1 Main Board




Connector	Description
No 1	Front IR
No 2	Connect to RS232 Board

5.2 The backside of Main Board

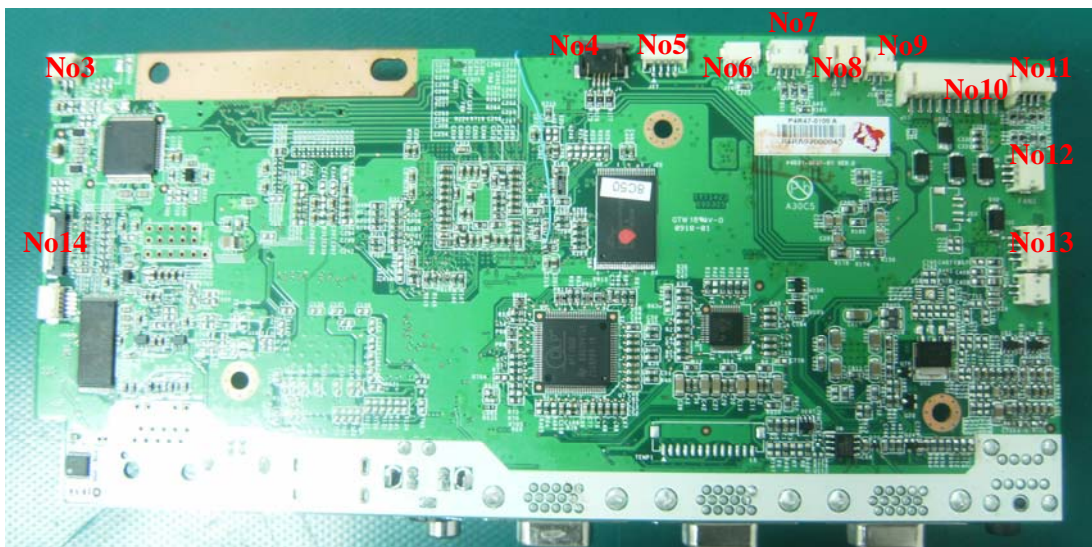


Connector	Description
No 3	Speaker
No 4	Color Wheel control
No 5	Color Wheel Sensor
No 6	Ignite signal connected to Ballast
No 7	Lamp FAN
No 8	Thermal sensor
No 9	Safety switch
No 10	Main Board Power Supply
No 11	FAN2
No 12	FAN1
No 13	Back IR
No 14	Keypad control

5.3 Ballast Board

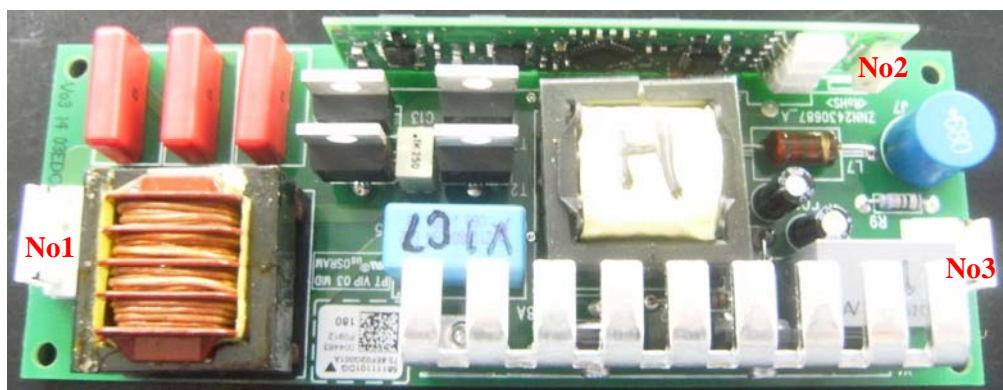

Connector	Description
No 1	Lamp power supply
No 2	Ignite signal connected to Main board
No 3	High Voltage Power supply

5.4 Power Board

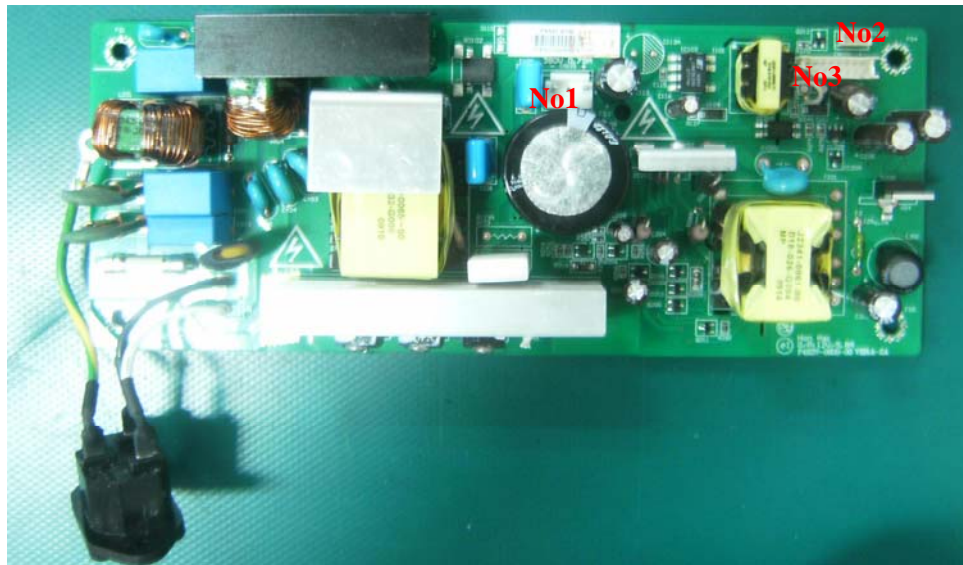

Connector	Description
No 1	380V output for ballast
No 2	12V output for RS232 board
No 3	12V/5V output for Main board


6. FRU (Field Replaceable Unit) List

Introduction

This section is a list of all the FRU removal . Following the FRU table of contents is an enlarged view of the entire projector, which shows the primary FRUs in the projector.

When working on the projector, use appropriate anti -static precautions such as anti-static mats, wrist straps and grounded work surfaces. Failure to do this can destroy static-sensitive components and make the product inoperable.

6.1 Mechanical Drawing

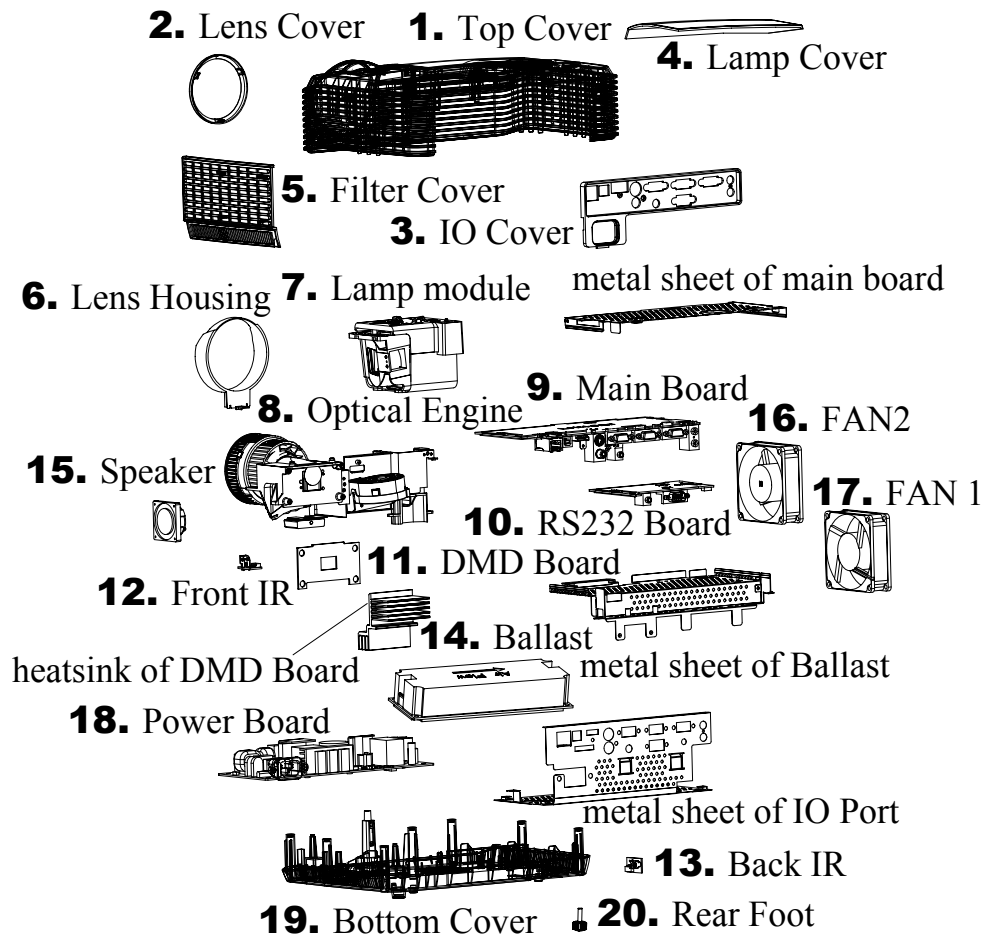


EXPLODED PARTS LIST (PJD6211)




ViewSonic Model Number: VS12618

Rev: 1a

Item	ViewSonic P/N	Ref. P/N	Description	Q'ty
1	C-00009631	P4S84-4500	Top Cover	1
2	C-00009638	P4E34-4650-00	Lens Cover	1
3	C-00009633	P4S84-4530	IO Cover	1
4	C-00009630	P4R84-4520	Lamp Cover	1
5	C-00009635	P4R34-4600-00	Filter Cover	1
6	C-00009634	P4R34-4570-00	Lens Housing	1
7	RLC-050	P4R84-2400	Lamp Module	1
8	E-00009492	P4S84-2200	Optical Engine	1
9	B-00009697	P4S84-7100	Main Board	1
10	B-00009701	P4R47-6101	RS232 Board	1
11	B-00009703	P4D47-6100	DMD Board	1
12	B-00008158	P3747-5101	FIR Board	1
13	B-00009700	P4R47-5101	BIR Board	1
14	B-00009702	P4R84-9000	Ballast	1
15	E-00009495	J2413-0092-00	Speaker	1
16	M-00008342	J2394-0101-01	Fan2	1
17	M-00008212	J2394-0101-00	Fan1	1
18	B-00009698	P4U84-8100	Power Board	1
19	C-00009632	P4R84-4510	Bottom Cover	1
20	M-00008344	P4E38-1570-00	Rear Foot	1


6.2 Packing drawing

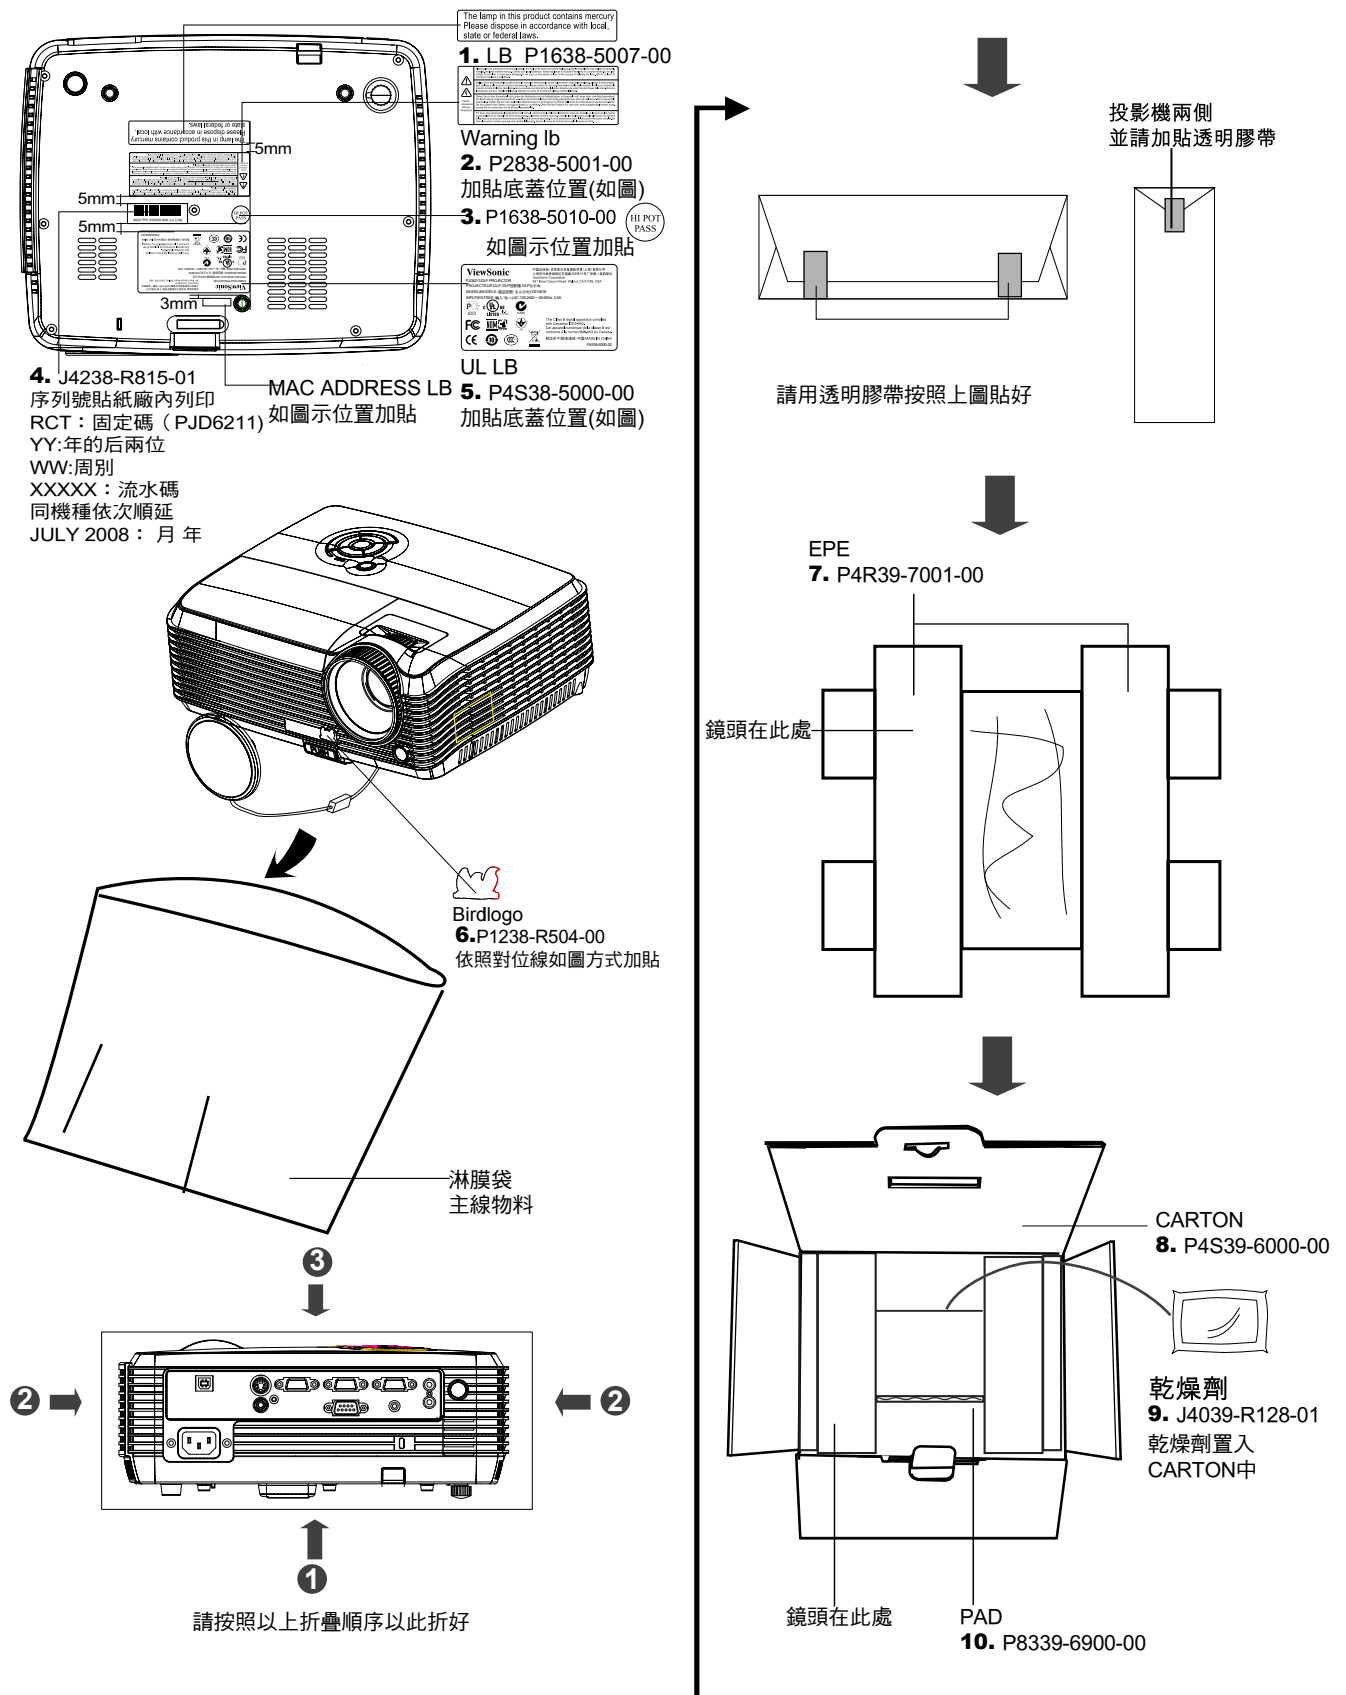

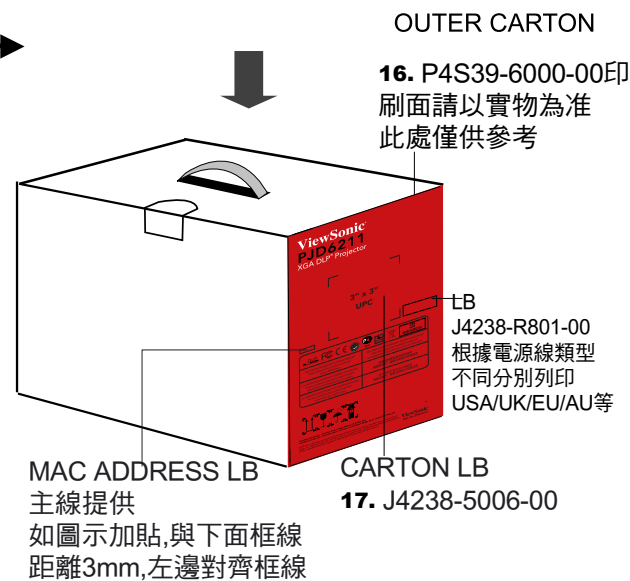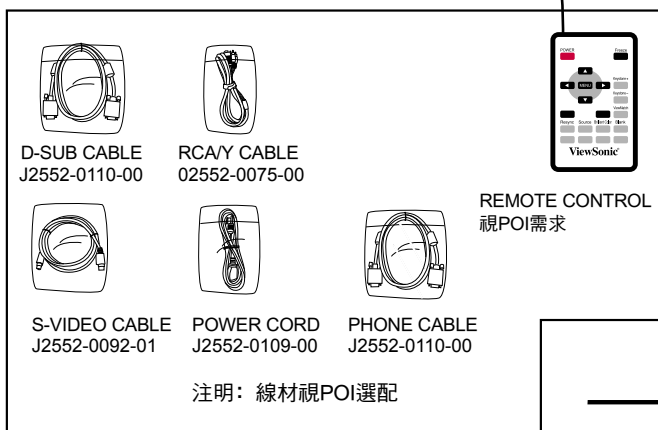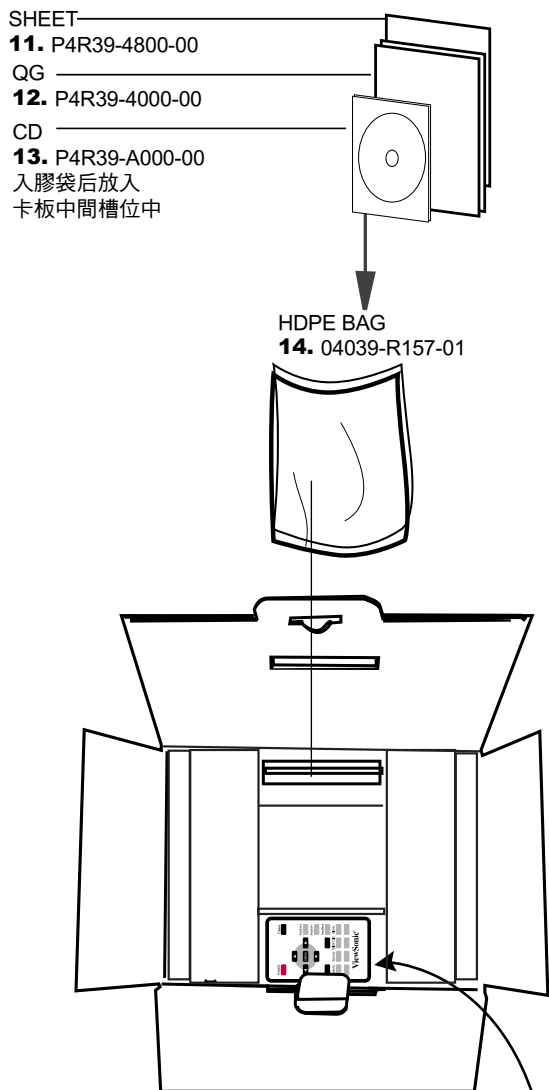

CARTON LB
 J4238-5006-00 廠內列印內容具體內容如下.

此虛線框內廠內列印條碼內容為
 Projector PJD6211 (Code 128)

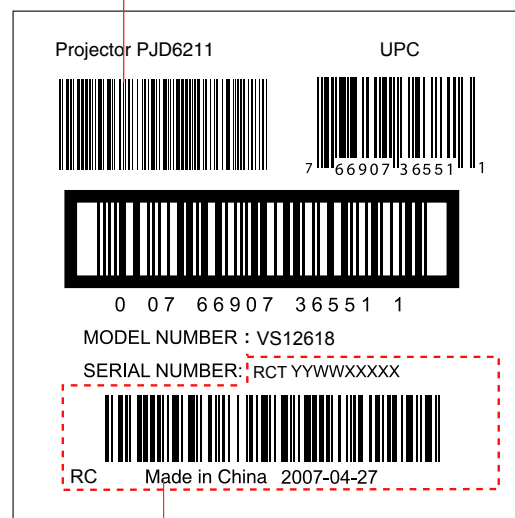

此虛線框內廠內列印
 條碼內容為
 RCTYYWWXXXXX (YY: year, WW: week)
 RCT表示PJD6211
 XXXXX為流水碼
 CODE 128
 2007-04-27 為生產年月日
 "RC"為出貨向別
 M: VSA
 E: VSE
 P: VSI
 G: VSCN

PACKING PART LIST (PJD6211)

ViewSonic Model Number: VS12618

Rev: 1a

Item	ViewSonic P/N	Ref. P/N	Description	Q'ty
1	NA	P1638-5007-00	LB	1
2	NA	P2838-5001-00	WARNING LB	1
3	NA	P1638-5010-00	LB	1
4	NA	J4238-R815-01	SERIAL LB	1
5	NA	P4S38-5000-00	UL LB	1
6	NA	P1238-R504-00	LB	1
7	P-00009637	P4R39-7001-00	EPE	1
8&16	P-00009636	P4S39-6000-00	CARTON	1
9	P-00008880	J4039-R128-01	DESICCANT	1
10	P-00008722	P8339-6900-00	PAD	1
11	NA	P4R39-4800-00	SHEET	1
12	DC-00009666	P4S39-4000-00	QG	1
13	DC-00009667	P4R39-A000-00	CD-ROM	1
14	P-00008410	J4039-R157-01	PE.BAG	1
15	P-00008794	J4039-R184-01	PE.BAG	1
16	NA	P0N38-5013-00	CARTON LB	1
17	NA	J4238-5006-00	LB	1

7. Maintenance

The projector needs proper maintenance. You should keep the lens clean as dust, dirt or spots will project on the screen and diminish image quality. If any other parts need replacing, contact your dealer or qualified service personnel. When cleaning any part of the projector, always switch off and unplug the projector first.

Warning:

Never open any of the covers on the projector. Dangerous electrical voltages inside the projector can cause severe injury. Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

Cleaning the Lens

Gently wipe the lens with lens cleaning paper. Do not touch the lens with your hands.


Cleaning the Projector Housing

Gently wipe with a soft cloth. If dirt and stains are not easily removed, use a soft cloth dampened with water, or water and neutral detergent, and wipe dry with a soft, dry cloth.

Cleaning the Filter Cover

The filter cover, which is located at the side of the projector, should be cleaned after every 100 hours of use. If it is not cleaned periodically, it can become clogged with dust and prevent the projector from being ventilated properly. This can cause overheating and damage the projector. To clean the filter cover:

1. Switch the projector off and unplug the AC power cord from the wall socket.
2. Remove the filter cover as the illustration shown.
3. Clean the filter cover.
 - To clean the filter cover, you are advised to use a small vacuum cleaner designed for computers and other office equipment.
 - If the filter cover is torn, replace it.
4. Replace the filter cover.
5. Attach the filter cover.
6. Plug the power back into the projector.

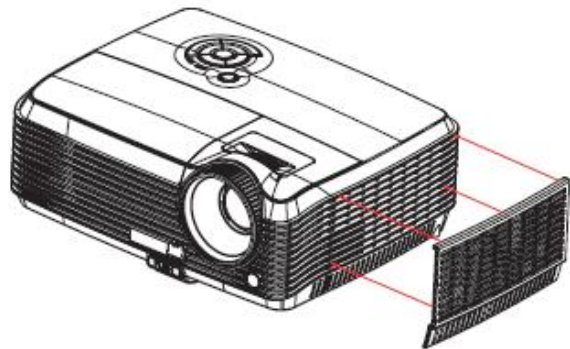

8. Recommended Spare Parts List

RECOMMENDED SPARE PARTS LIST (PJD6211)

ViewSonic Model Number: VS12618

Serial No. Prefix: RCT

Rev: 1b

Item	Category	Part Name	Description	ECR/ECN	ViewSonic P/N	Ref. P/N	Ref. NO	Compatibility	Location
1	Accessories:	LAMP	LAMP-MODULE-ASY-180W-SPARE PART VPD-X5400, ROHS		RLC-050	P4R84-2400			
2	[Adapter, Remote Controller, Power Cord, External Cables]	Remote Controller	BATTERY MODULE SPARE PARTS VIEWSONIC VPD-X5400 ROHS(with package)		A-00008487	P4R84-3000		Second source	
3		Power Cord	POWER CORD(AUSTRALIA), (SAA)YP-35/YC-12 YUNG LI ROHS		A-00008060	J2552-0053-00			
4		Power Cord	POWER CORD(CHINA), YP-03/YC-12 YUNG LI ROHS		A-00008056	J2552-0106-00			
5		Power Cord	POWER CORD(EUROPE), YP-22/YC-12 YUNG LI ROHS		A-00008057	J2552-0107-00			
6		Power Cord	POWER CORD(SOUTH AFRICA), YP-80/YC-12 YUNG LI ROHS		A-00008233	J2552-0056-01			
7		Power Cord	POWER CORD(UK), YP-61/YC-12 YUNG LI ROHS		A-00008058	J2552-0108-00			
8		Power Cord	POWER CORD(USA), UL/YP-12/YC-12), YUNG LI ROHS		A-00008059	J2552-0109-00			
10	PC Board	RS232 Cable	DB9F TO DB9P CABLE L1500 P33251A-05 PAN ROHS		CB-00009062	J2553-0208-00			
11		RGB to component adapter	VGA-15P-6P CABLE P4724-08 PAN ROHS		CB-00008906	J2552-0212-00			
12		Signal Cable (VGA)	VGA-15P CABLE P3842-06 PAN ROHS		CB-00008710	J2552-0072-03			
13		Main Board	MAIN DIP PCB ASY SPARE PARTS VPD-X5500 ROHS		B-00009697	P4S84-7100			
14		Power Board	POWER BOARD SPARE PARTS VPD-X5501 ROHS		B-00009698	P4U84-8100			
15	Assembly: [All PCBA]	Key Pad	KEYPAD DIP PCB ASY VPD-X5500 ROHS		B-00009699	P4S47-7100			
16		FIR Board	FIR DIP PCB ASY PD-X702 ROHS		B-00008158	P3747-5101			
17		BIR Board	BIR DIP PCB ASY P4rVPD-X5400 ROHS		B-00009700	P4R47-5101			
18		RS232 Board	RS232 DC DIP PCB ASY VPD-X5400 ROHS		B-00009701	P4R47-6101			
19		Ballast	OSRAM-BALLAST-180W-SPARE PART VPD-X5400 ROHS		B-00009702	P4R84-9000			
20	Cabinets:	DMD Board	DMD450 DIP PCB ASY TPD-S5500 ROHS		B-00009703	P4D47-6100			
21		Cw Sensor Board	CW DIP PCB ASY PD-S550 ROHS		B-00009081	P0E47-5100			
22		Lamp Cover	LAMP COVER SPARE PARTS VPD-X5400 ROHS		C-00009630	P4R84-4520			
23		Top Cover	TOP COVER SPARE PARTS VPD-X5500 ROHS		C-00009631	P4S84-4500			
24		Bottom Cover	BOTTOM COVER SPARE PARTS VPD-X5400 ROHS		C-00009632	P4R84-4510			
25	[Front Bezel, All Covers, Base Assembly]	IO Cover	IO COVER SPARE PARTS VPD-X5500 ROHS		C-00009633	P4S84-4530			
26		Lens Housing	LENS HOUSING VPD-X5400 00 NO PAINTING ROHS		C-00009634	P4R34-4570-00			
27		Filter Cover	FILTER COVER VPD-X5400 00 NO PAINTING ROHS		C-00009635	P4R34-4600-00			
28		ZOOM RING	ZOOM RING VPD-X5400 99 FOR PAINTING ROHS		C-00009636	P4R34-4550-99			
29		FOCUS RING	RINGS SPARE PARTS VPD-X5400 ROHS		C-00009637	P4R84-4540			
30	Cables: [All Internal Cables/wires]	Wire	CONN FPC_0.5PITCH_20PIN_A20240C344NB_ENTERY_BOTTOM_ROHS(top cover to main board)		CB-00009052	J2471-0300-00			
31		Wire	WIRE ASSY_CON-SW_1102003-202_MSK_ROHS(top cover to main board)	VS-E090256 Added on 10/15/09	CB-00009055	J2595-0366-00			
32		Wire	WIRE CON-CON_1102003-182_MSK_4PIN_L120MM_1571#28_ROHS(color wheel to main board)		CB-00009053	J2595-0325-00			
33		Wire	WIRE CON-CON_1102003-236_MSK_4PIN_L105MM_1571#28_ROHS(color wheel to main board)	VS-E090251 Added on 10/15/09	CB-00009158	J2595-0368-01			
34		Wire	WIRE CON-CON_1102003-231_MSK_10PIN-2*8PIN_L115MM_1007#24_ROHS(power board to main board)		CB-00009054	J2595-0407-00			
35	Cables: [All Internal Cables/wires]	Wire	WIRE CON-CON_1102003-98_MSK_2PIN_L140MM_1015#22_ROHS(power board to ballast)		CB-00008469	J2595-0218-00			
36		Wire	WIRE ASSY_CON-SW_1102003-202_MSK_ROHS(top cover to main board)		CB-00009058	J2596-0366-00			
37		Wire	WIRE CON-CON_1102003-203_MSK_4PIN_L115MM_1571#28_ROHS(IR to main board)		CB-00009056	J2595-0367-00			
38		Wire	WIRE LAMP-BALA_01800138R_AVERTRONICS_2PIN_L135MM_3239V#20_ROHS(Ballast to Lamp)		CB-00009057	J2595-0277-00			
39		Wire	WIRE CON-MOTOR PROTECTOR_2PIN_L65MM_1332#24 ROHS (温控开关)		CB-00009058	J2595-0346-00			
40	Documentation:	Wire	WIRE CON-CON_1102003-202_MSK_4PIN_L185MM_1571#28_R0HS(RS232 Board to main board)	VS-E090206 Replaced on 10/15/09	CB-00009059	J2596-0271-00			
41		Wire	WIRE CON-CON_1102003-235_MSK_3PIN_L185MM_1571#28_ROHS(RS232 Board to main board)		CB-00009156	J2595-0371-01			
42		Wire	WIRE CON-CON_1102003-206_MSK_5PIN_L95MM_1571#28_ROHS(Ballast to main board)		CB-00009060	J2595-0370-00			
43		Wire	WIRE CON-CON_1102003-205_MSK_4PIN_L130MM_1571#28_ROHS(power board to RS232 board)		CB-00009061	J2595-0369-00			
44		Wire	WIRE CON-CON_1102003-205_MSK_4PIN_L130MM_1571#28_ROHS(power board to RS232 board)		CB-00009666	P4S39-4000-00			
45	[Quick Start Guide, CD ROM, Label / Sticker]	Quick Start Guide (QSG)	QG VIEWSONIC VPD-X5500 GLOBAL ROHS		DC-00009667	P4R39-A000-00			
46		User's Guide (CD ROM)	CD ROM VIEWSONIC VPD-X5400 GLOBAL ROHS		DC-00008794	J4238-5069-00			
47		Label / Sticker	CT/LB NO BRAND GLOBAL ROHS		E-00009092	P4R84-2200			
48		Optical Engine	OPTICAL ENGINE-ASY-WITHOUT LAMP9G SPARE PARTS VPD-X5500 ROHS	VS-E090258 Replaced on 10/15/09	E-00009552	P4S84-2201			
49		Optical Engine	OPTICAL ENGINE-ASY-WITHOUT LAMP9G SVDMD SPARE PARTS VPD-X5500 ROHS(for 9G)		E-00009493	P4R84-2600			
50	Components:	Color Wheel	COLOR-WHEEL MODULE SPARE PARTS VDP-X5400 ROHS		E-00009494	P4R84-6300			
51		Lens	LENS-ASY SPARE PARTS VPD-X5400 ROHS		E-00009652	P4R84-6200			
52		Speaker	SPEAKER P28KC16-9-JIS-2 VECO ROHS		E-00009495	J2413-0092-00			
53		Speaker	SPEAKER P28KC16-9-JIS-2 VECO ROHS		HW-00008066	J2035-2520-00			
54		Screw	HEXAGON-HEAT-BOLT-4 MPD-S651 3M ROHS		HW-00008860	J1635-3670-00			
55	Hardware: [Screw, Bracket, Hinge]	Screw	SCREW TP 3 10 A 2 D-5.5 BLACK NONE ROHS		HW-00008861	J1635-C073-00			
56		Screw	SCREW M 3 X0.8 E 1.5 D-5.0 BLACK NI ROHS		HW-00008043	J1635-3720-00			
57		Screw	SCREW-WASHER TP 2 4 D 1 D-3.2 NI NONE SUS ROHS		HW-00008862	J1635-2250-00			
58		Screw	SCREW M 2 5 A D-3 A0.8 BLACK HEAT-TREATMENT ROHS		HW-00008863	J1635-D420-0A			
59		Screw	SCREW-WASHER M 4 6 A 2.6 D-7 ZN NONE SUS ROHS		HW-00008864	J1635-3620-0A			
60	Miscellaneous:	Screw	SCREW-WASHER TP 3 6 D 2.6 D-5.4 ZN NONE SUS ROHS		HW-00008345	J1635-A491-00			
61		Screw	SCREW-WASHER TP 3 10 D 7 D-5.3 NI NONE SUS ROHS		HW-00008865	J1635-B853-0A			
62		Screw	SCREW-WASHER M 3 6 D 2 D-5.3 ZN NONE SUS ROHS		HW-00008866	J1635-D559-00			
63		Screw	SCREW TP 1.8 3 E 0.3 D-4.5 BLACK NONE ROHS		HW-00008867	J1635-3494-00			
64		Screw	SCREW TP 2 10 A 1.2 D-3.5 NI NONE ROHS		M-00008212	J2394-0101-00			
65	[Switch, Fan, Rubber Foot, Label]	Fan	FAN 3110RL-04W-S59-F00L(-60MM) NMB ROHS		M-00008342	J2394-0101-01			
66		Fan	FAN 3110RL-04W-S59-F03L(-60MM) NMB ROHS		M-00008343	J2394-0117-00			
67		Fan	FAN BFB0512VHD-8L07(L-65MM) DELTA ROHS		M-00008344	P4E38-1370-00			
68		Rear Foot	FOOT-REAR TPD-X5500 ROHS		P-00009636	P4S39-6000-00			
69		Packing Material:	CARTON VIEWSONIC VPD-X5500 GLOBAL ROHS		P-00008722	P8339-6900-00			
70	[Box, Foam, Bags]	Pad	PAD PREMIER PD-S650 GLOBAL ROHS		P-00009637	P4R39-7001-00			
71		Foam	EPE NO VPD-X5400 FOR BODY WITHOUT BAG ROHS		P-00008794	J4039-R184-01			
72		Pe Bag	PE BAG NO BRAND 298MM*190MM ROHS		P-00008410	J4039-R157-01			
73		Pe Bag	PE BAG NO BRAND GLOBAL ROHS		P-00008880	J4039-R128-01			
74		Desiccant	DESICCANT NO BRAND 50G-CLAY ROHS		PL-00008690	P4R38-1510-00			
75	Plastics: [Pedestal, Plate, Button, etc.]	Metal Dome	METAL DOME P4R VPD-X5400 ROHS		PL-00008691	P4E38-1070-00			
76		FAN PAD	FAN PAD TPD-X5500 ROHS		PL-00008692	P4R38-1530-00			
77		FAN SPONGE	FAN SPONGE P4R VPD-X5400 ROHS						

Remark 1: Above listed items are examples, supplier can expand the rows to add more necessary items.

Remark 2: All revised RSPLs with newly added items or any change made should be highlighted and correlated with the ECN/ECR approved by ViewSonic Corporation. This is to eliminate repeated cross checks of each item between this version and prior versions.


Appendix A: RS-232 Command and Configuration

Baud Rate: 19200 Parity Bit: none

Data Bit: 8 Stop Bit: 1 Assign Port: COM1

Name	Operation type	CRS	Header	Command	Response
Power	ON	BE,EF,10,05,00	C6,FF	11,11,01,00,01,00	06
	OFF	BE,EF,03,06,00	DC,DB	69,00,00,00,00,00	06
Source	Computer (Analog RGB)	BE,EF,03,19,00	19,29	01,47,05,CC,CC,00	06
	YCbCr	BE,EF,03,19,00	89,E8	01,47,05,CC,CC,00	06
	S-Video	BE,EF,03,19,00	E8,69	01,47,05,CC,CC,00	06
	Composite Video	BE,EF,03,19,00	78,A8	01,47,05,CC,CC,00	06
	HDTV (Y-Pb-Pr)	BE,EF,03,19,00	DA,A8	01,47,05,CC,CC,00	06
OSD	Menu	BE,EF,02,06,00	E9,D3	30,00,00,00,00,00	06
	Up	BE,EF,02,06,00	6D,D2	34,00,00,00,00,00	06
	Down	BE,EF,02,06,00	0B,D2	32,00,00,00,00,00	06
	Left	BE,EF,02,06,00	DA,D3	33,00,00,00,00,00	06
	Right	BE,EF,02,06,00	38,D2	31,00,00,00,00,00	06
ECO	On	BE,EF,03,06,00	EF,DB	6A,00,00,00,00,00	06
	Off	BE,EF,03,06,00	3E,DA	6B,00,00,00,00,00	06
Auto Source	On	BE,EF,03,06,00	89,DB	6C,00,00,00,00,00	06
	Off	BE,EF,03,06,00	58,DA	6D,00,00,00,00,00	06
Source		BE,EF,02,06,00	57,D0	2E,00,00,00,00,00	06
Auto-Sync		BE,EF,02,06,00	86,D1	2F,00,00,00,00,00	06
Blank Screen(Video)		BE,EF,02,06,00	DF,DF	66,00,00,00,00,00	06
Keystone	Keystone	BE,EF,02,06,00	3D,DE	64,00,00,00,00,00	06
	Up	BE,EF,03,06,00	10,DB	65,00,00,00,00,00	06
	Down	BE,EF,03,06,00	23,DB	66,00,00,00,00,00	06
Volume	Volume +	BE,EF,02,06,00	F1,DE	68,00,00,00,00,00	06
	Volume -	BE,EF,02,06,00	20,DF	69,00,00,00,00,00	06
Image		BE,EF,03,06,00	F2,DA	67,00,00,00,00,00	06
Aspect Ratio		BE,EF,03,06,00	0D,DA	68,00,00,00,00,00	06
Factory Reset		BE,EF,03,06,00	6B,DA	6E,00,00,00,00,00	06
Lamp Hour		BE,EF,03,06,00	BA,DB	6F,00,00,00,00,00	Lamp Hour
Firmware Version		BE,EF,03,06,00	D5,D9	70,00,00,00,00,00	Version

System Status	BE,EF,03,06,00	04,D8	71,00,00,00,00,00	03:Projector ON (Normal Mode)
---------------	----------------	-------	-------------------	--

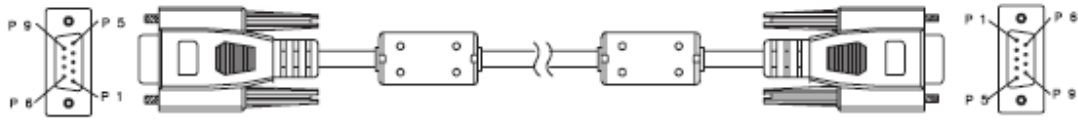

D-Sub 9 pin

1	1 CD
2	RXD
3	TXD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

Wire List

C1	COLOR	C2
1	Black	1
2	Brown	2
3	Red	3
4	Orange	4
5	Yellow	5
6	Green	6
7	Blue	7
8	Purple	8
9	White	9
SHELL	DW	SHELL


Appendix B: IR Control Code



Key	Format	Byte1	Byte2	Byte3	Byte4
Power	NEC	83	F4	13	87
Source	NEC	83	F4	13	02
Up	NEC	83	F4	13	82
Down	NEC	83	F4	13	85
Left	NEC	83	F4	13	83
Right	NEC	83	F4	13	81
MENU	NEC	83	F4	13	84
Auto	NEC	83	F4	13	64
Mouse	NEC	83	F4	13	6B
ViewMatch	NEC	83	F4	13	63
Freeze	NEC	83	F4	13	80
Enter / Mouse Left	NEC	83	F4	13	8c
Exit / Mouse Right	NEC	83	F4	13	8d
KeyS+	NEC	83	F4	13	86
KeyS-	NEC	83	F4	13	8a
Digital Zoom+	NEC	83	F4	13	68
Digital Zoom-	NEC	83	F4	13	6a
Volume+	NEC	83	F4	13	88
Volume-	NEC	83	F4	13	89
Mute	NEC	83	F4	13	8b
Blank	NEC	83	F4	13	8f

Appendix C: How to reset the Lamp Hours(OK)


- (1) Press “Menu” button to open the Main menu.
- (2) Move color bar to “setting” item and then press right button to enter sub-menu.

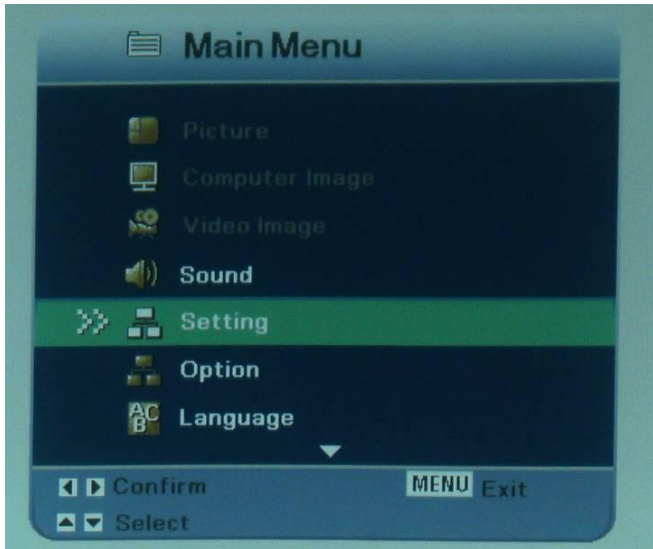


- (3) Move down the color bar to “Lamp Hours” item.




(4) Press the direction keypad following the actions below to enter engineering mode:
Right once, left twice, right three times, left four times.

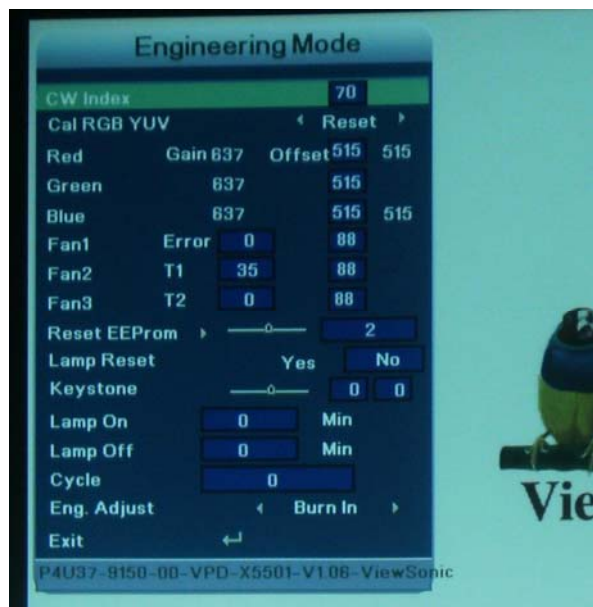

(5) Move down the color bar to "Lamp Reset" item.

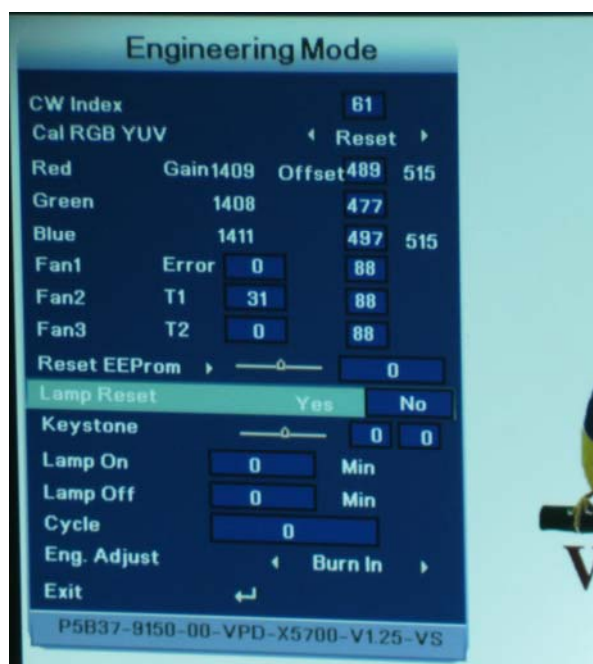

(6) Press left button to select "yes" to reset Lamp Hours .

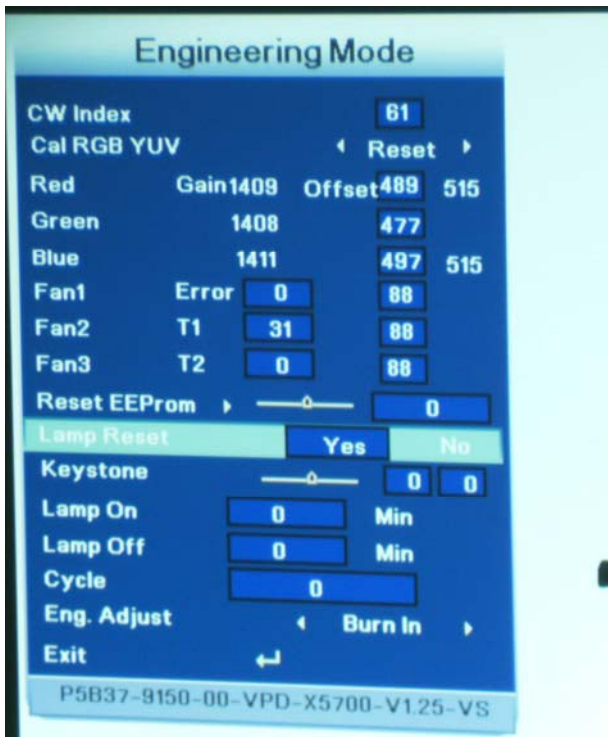

(7) Then the Lamp Hours would reset to 0 hours.

**** Reader's Response ****

Dear Readers:

Thank you in advance for your feedback on our Service Manual, which allows continuous improvement of our products. We would appreciate your completion of the Assessment Matrix below, for return to ViewSonic Corporation.

Assessment

A. What do you think about the content of **this** Service Manual?

<i>Unit</i>	<i>Excellent</i>	<i>Good</i>	<i>Fair</i>	<i>Bad</i>
1. System Introduction				
2. Firmware Upgraded Flow				
3. Machine Disassembly and Replacement				
4. Troubleshooting and Verifying the Repair				
5. Connector Information				
6. FRU (Field Replaceable Unit) List				
7. Maintenance				
8. Recommend Spare parts List				

B. Are you satisfied with **this** Service Manual?

<i>Item</i>	<i>Excellent</i>	<i>Good</i>	<i>Fair</i>	<i>Bad</i>
1. Service Manual Content				
2. Service Manual Layout				
3. The form and listing				

C. Do you have any other opinions or suggestions regarding **this** service manual?

Reader's basic data:

Name:		Title:	
Company:			
Add:			
Tel:		Fax:	
E-mail:			

After completing this form, please return it to ViewSonic Quality Assurance in the USA at facsimile 1-909-839-7943.